



# DEL MOTORIZED SOLUTIONS

(866) 44MOTOR - (215) 639.3880

WWW.MOTORIZEDSOLUTIONS.COM

### Traverse Rod

Insure that the traverse rod is level and securely mounted to the wall. The rod brackets should be screwed into the wall studs or the appropriate type of fasteners should be used when anchoring the rod to other types of wall construction. **Motorized operation applies more strain on the rod, brackets, and mounting fasteners than manual cord-draw operation.**

### Cord

Only a No. 4 nylon cord with fiberglass core should be used. Check the cord carefully and replace it if it is frayed or worn. Manually operate the drapery to make sure that it draws smoothly and that the amount of effort required is proportionate to the size of the drapery.

### COMPONENTS

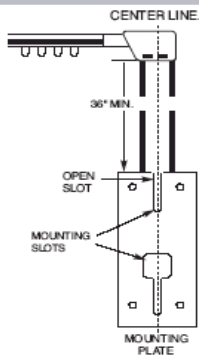
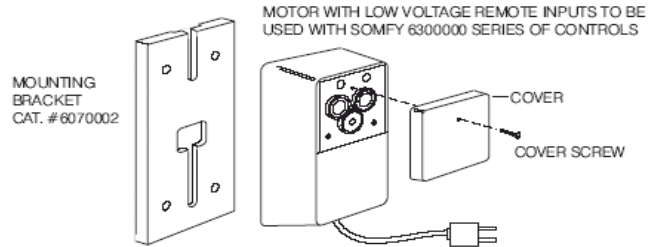


FIG. 1


### Mounting Motor

For proper operation and maximum life of the cord and motor drive components, it is important that the drapery motor be mounted as specified below:

A plumb line should be used to ensure that the center line of the bracket coincides with the center distance between the cord outlets. See Figure 1. Ideally, the bracket should be concealed behind the drapery and about 72 inches below the rod. Do not mount the bracket less than 36 inches below the rod.

Position the bracket at the correct location on the wall. Using a pencil, mark the location of the four round mounting holes in the bracket. If the bracket will be mounted to drywall, drill a 1/8" diameter hole at each of the four marks. Using a hammer or the butt of a screwdriver, gently tap the drywall anchors provided into the wall. (Note: Do not pre-drill the wall where a mounting hole in the bracket is positioned over a stud.) Using the screws provided, screw the bracket to the wall with the open slot at the top. See Fig. 1.

Insert the two machine screws into the holes at the top and bottom of the drapery motor. See Fig. 2. Thread a retainer nut about two turns onto each screw. Mount the motor onto the bracket by simultaneously inserting the bottom retainer nut into the square hole on the front of the bracket and the top retainer nut into the slot at the top of the bracket. Position the motor on the bracket such that the top retainer nut is even with the top of the bracket. See Fig. 3. Slightly tighten the two screws.

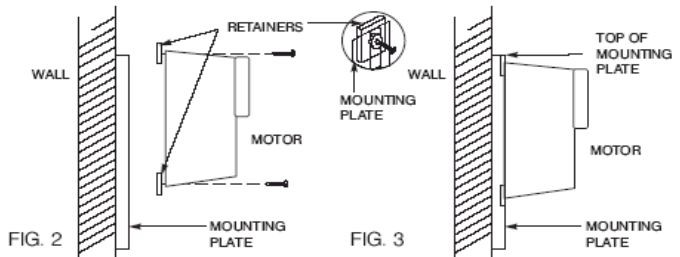

Remove the cover screw and cover from the front of the motor. Thread the cord loop through the drive wheels being careful not to crisscross the cords. See Figure 4. Remove the slack in the cord by adjusting length of cord at master carrier. Loosen the two motor mounting screws and lower the position of the motor on the bracket to achieve a slight tension in the cord. (Note: Excessive cord tension can shorten the life of the motor drive components.) Retighten screws until snug. Do not overtighten!

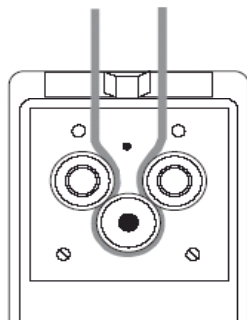


FIG. 4

### Load Setting

Set the load switch on front of motor according to the chart at left. (Note: Use of excessive power places unnecessary stress on rod, brackets, and walls.) Replace the front cover and cover screw.

### Suggested Settings

Rod Length	Light to Medium Fabric	Heavy Fabric
0' - 8'	Light (L)	Light (L)
8' - 12'	Light (L)	Light (L)
12' - 16'	Medium (M)	Medium (M)
16' - 20'	Medium (M)	Medium (M)
Over 20'	Heavy (H)	Heavy (H)

*Showroom:*  
2075 Byberry Road  
The Atrium, Suite 108  
Bensalem, PA 19020

*Factory:*  
111 Buck Road  
Unit #900  
Huntingdon Valley, PA 19006