




DEL MOTORIZED SOLUTIONS

(866) 44MOTOR - (215) 639.3880

WWW.MOTORIZEDSOLUTIONS.COM

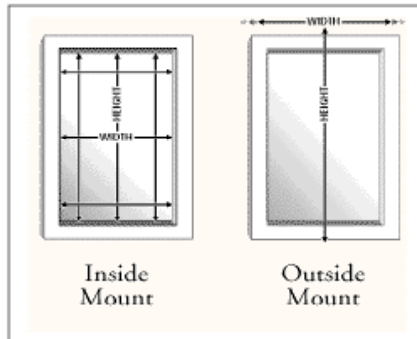

Guidelines For A Perfect Fit

- Measure each window individually, as size variances are common.
- Record width first, then height (also referred to as length) to the nearest 1/8".
- Measure width from left to right, height from top to bottom, using a steel tape measure. Do not use a cloth tape.

Select your window fashion type for measuring instructions:

Horizontal Blinds and Fabric Shades

Inside mount:

- Inside mount blinds and shades are installed inside the window casing. Minimum depth requirements vary by product and headrail type. Ask your designer or sales associate for details.
- Measure the exact inside width of window casing from one inside edge to the other in three different places. Record the narrowest measurement.
- Measure the exact height in three different places from top edge of opening to top of sill. Record the longest measurement.
- Do not take any deductions for clearance. The factory will take necessary deductions for a perfect fit.

Outside Mount:

- Outside mount blinds and shades are installed outside the window casing, covering an area larger than the window itself.
- Measure the exact width to be covered. Be sure the measurement overlaps the window opening by at least 1-1/2" on each side (3" total overlap) to ensure light control and privacy.
- Measure exact height to be covered, including desired overlap (typically from top edge of molding to bottom edge, or to top of sill if there is one).
- The factory makes NO allowances on outside mount.

Showroom:
2075 Byberry Road
The Atrium, Suite 108
Bensalem, PA 19020

Factory:
111 Buck Road
Unit #900
Huntingdon Valley, PA 19006



DEL MOTORIZED SOLUTIONS

(866) 44MOTOR - (215) 639.3880

WWW.MOTORIZEDSOLUTIONS.COM

Showroom:
2075 Byberry Road
The Atrium, Suite 108
Bensalem, PA 19020

Factory:
111 Buck Road
Unit #900
Huntingdon Valley, PA 19006