


Lutron PerfectFit Bendable Drapery Track Cavity Instructions Suplimental

Please use this guide in conjunction with the PerfectFit straight cavity instructions guide

Congratulations on your purchase of a specialty system from Motorized Solutions.

If you have any questions, please call technical support at 1-866-446-6867
or email us at info@motorizedsolutions.com

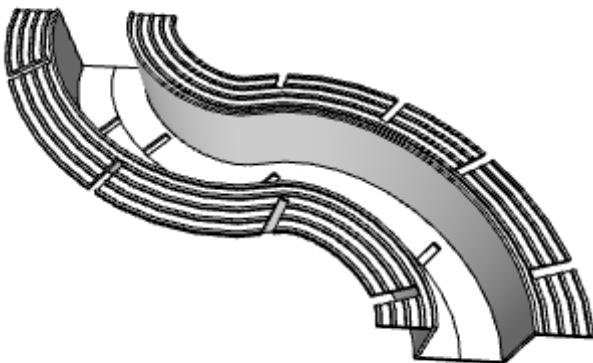

Important Notes - Please Read Before Installing



CAUTION: RISK OF FALLING OBJECTS

Securely install the system per the mounting instructions. Failure to do so could result in injury.



All mounting surfaces must be level.



Perfect Fit and hardware are to be anchored into wood blocking. If wood blocking is not available, you must use appropriate fasteners (not included) to support the weight of the system and load.



Pre-drill all holes with the appropriate size bit.




TOOLS REQUIRED

Pencil, Tape Measure, Powered Screwdriver, Drill, Level, Rasp, Drill bits.

PerfectFit

Step 1 - Blocking


Install wood blocking between the joists in the areas that will be receiving the PerfectFit recessed cavity.

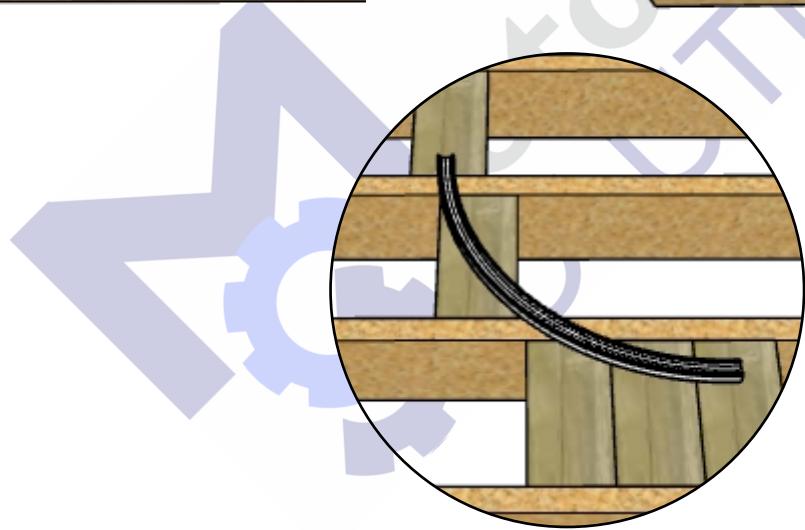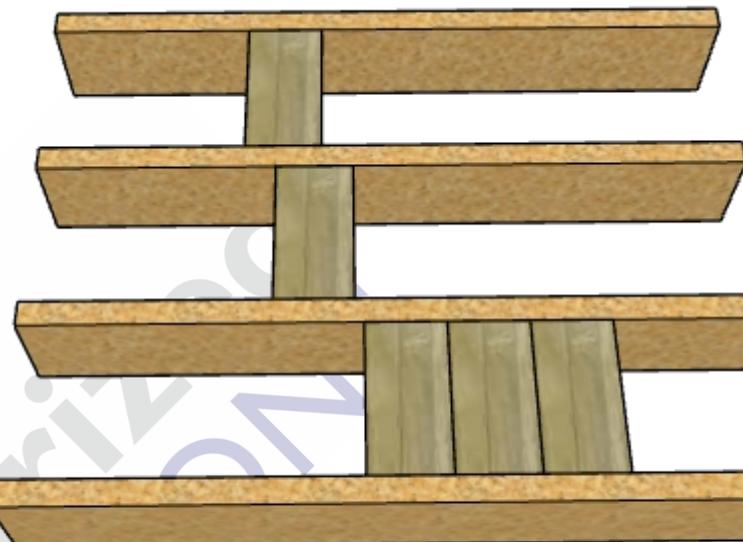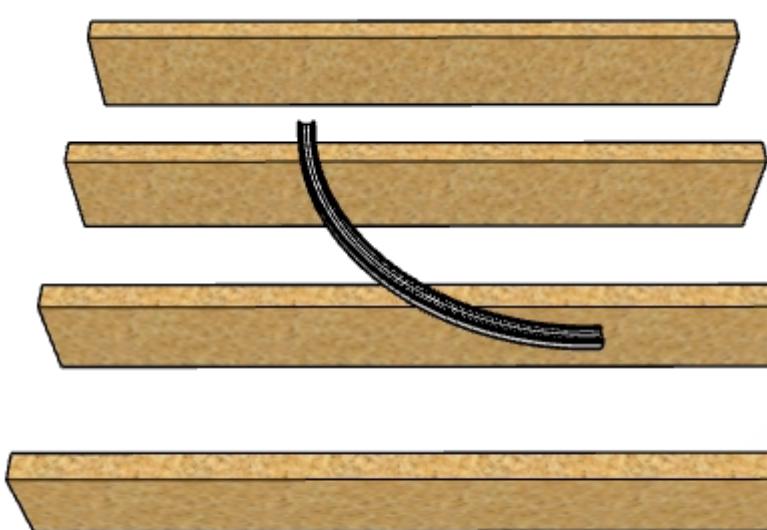

PerfectFit


Step 2 - Drywall

Install the drywall over the joists.

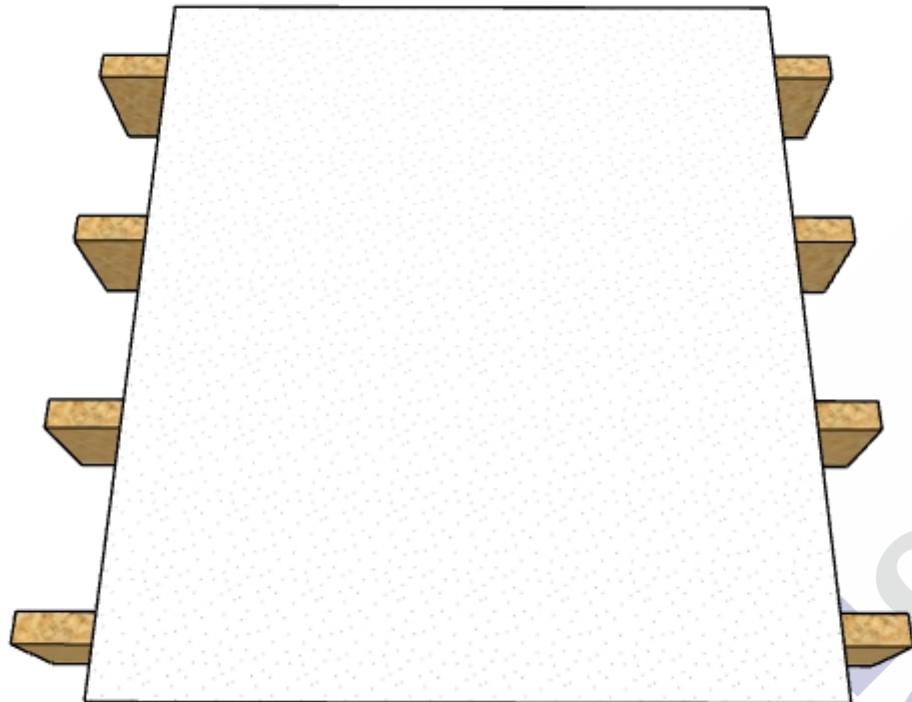

Step 3 - Draw The Track Outline


Draw the outline of the drapery track on the ceiling. Add an additional $1/4"$ to both sides of the radius.

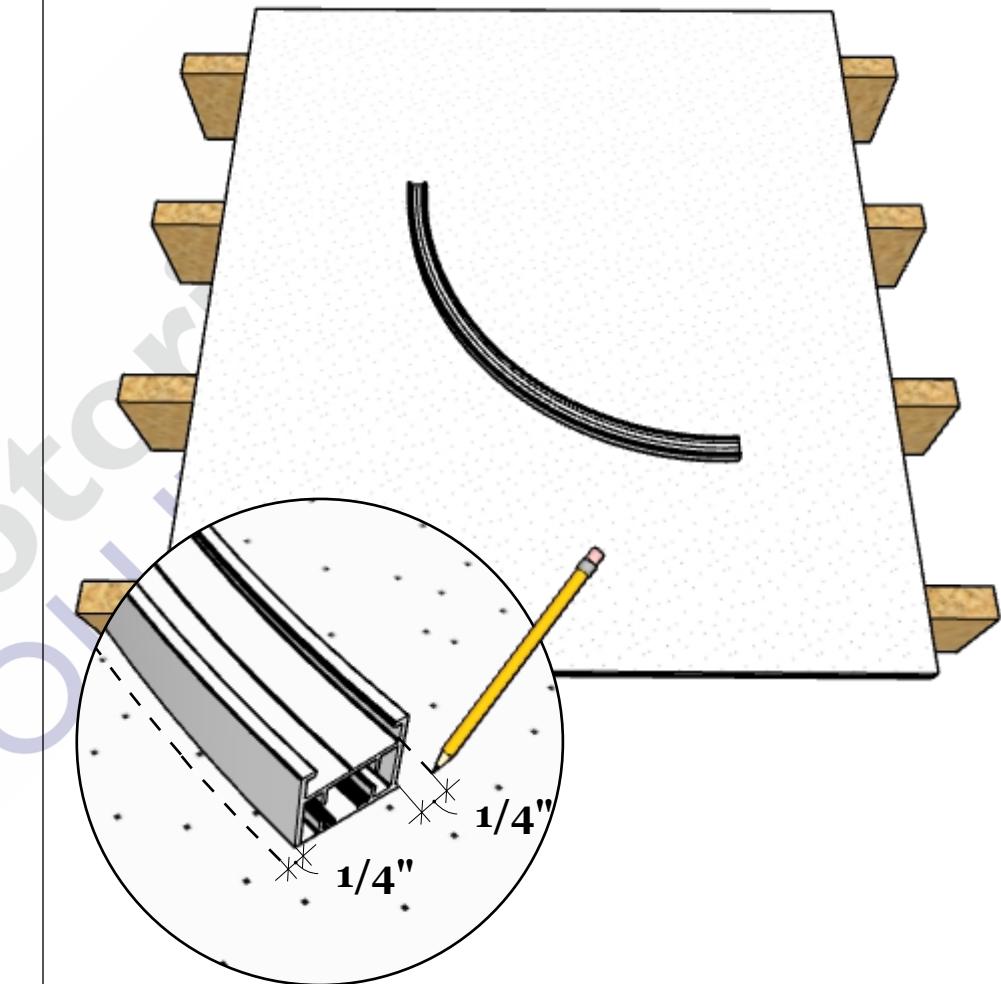

PerfectFit


Step 4 - Cut The Drywall

Cut out the drywall along the traced line.

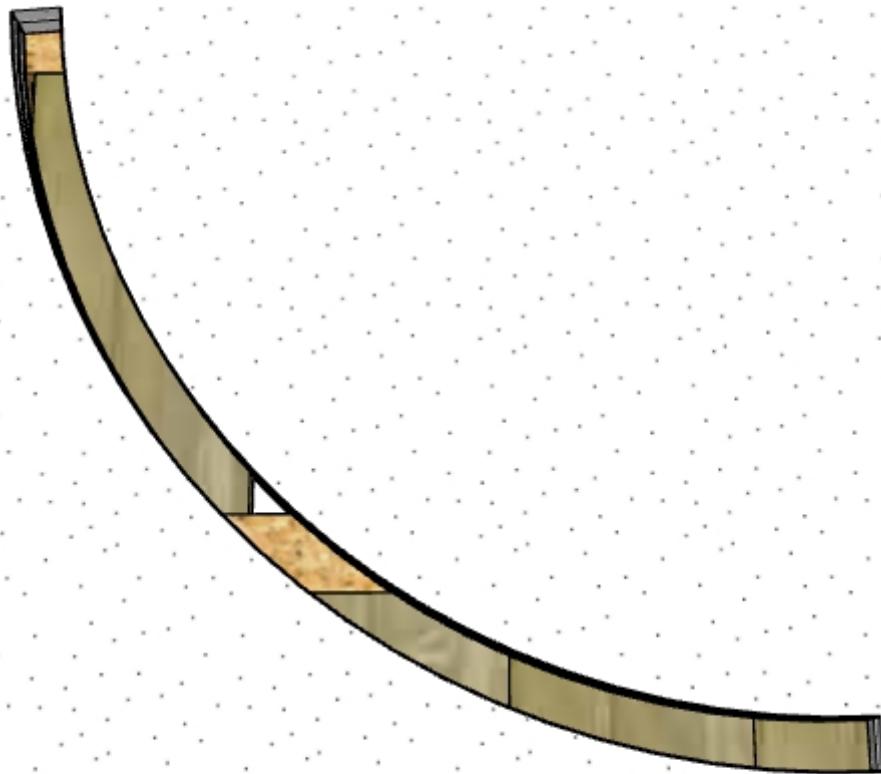

Step 5 - Install The Cavity


Place both sides of the PerfectFit bendable drapery track cavity inside of the drywall.

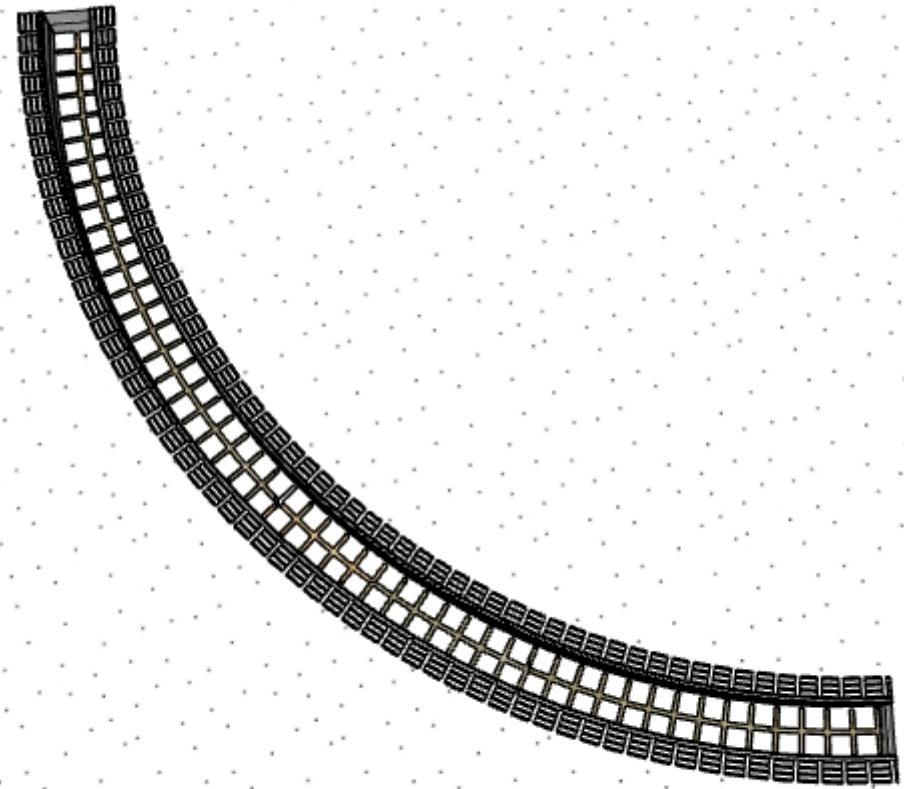

PerfectFit

Step 6 - Install the Anchoring Spacers


Install spacers, skipping 2 to 8 tabs between each. The base of the spacer separates the two sections of bendable cavity to an exacting width of .1025" while anchoring both sides of the cavity

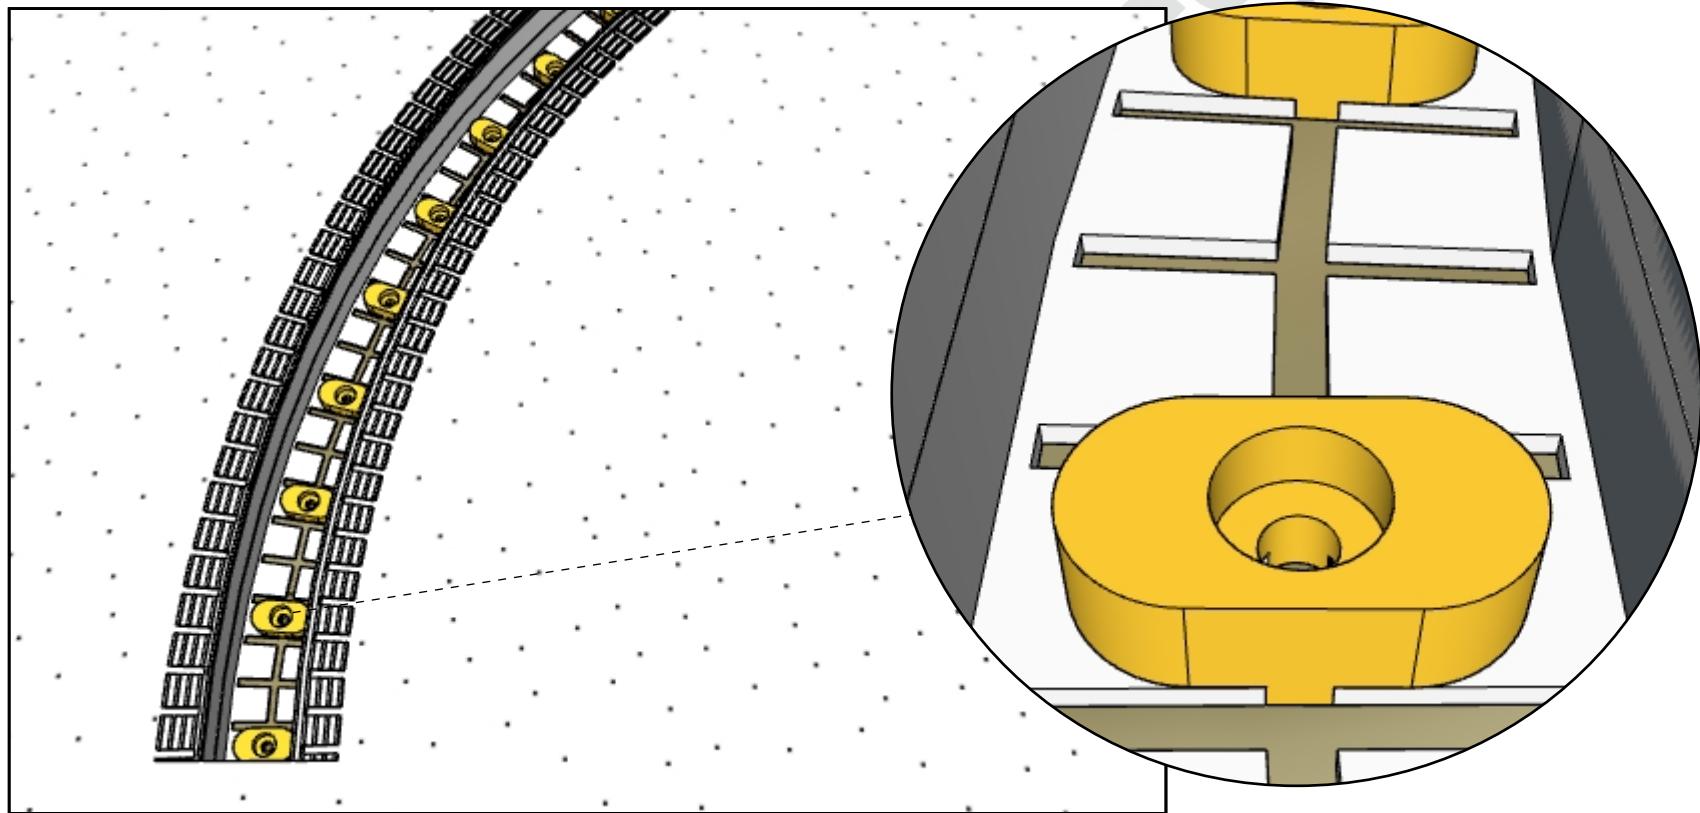

Step 7 - Test The Fit

Install screw anchors through the spacers to partially anchor the cavities.


Insert the track to test fit the shape.

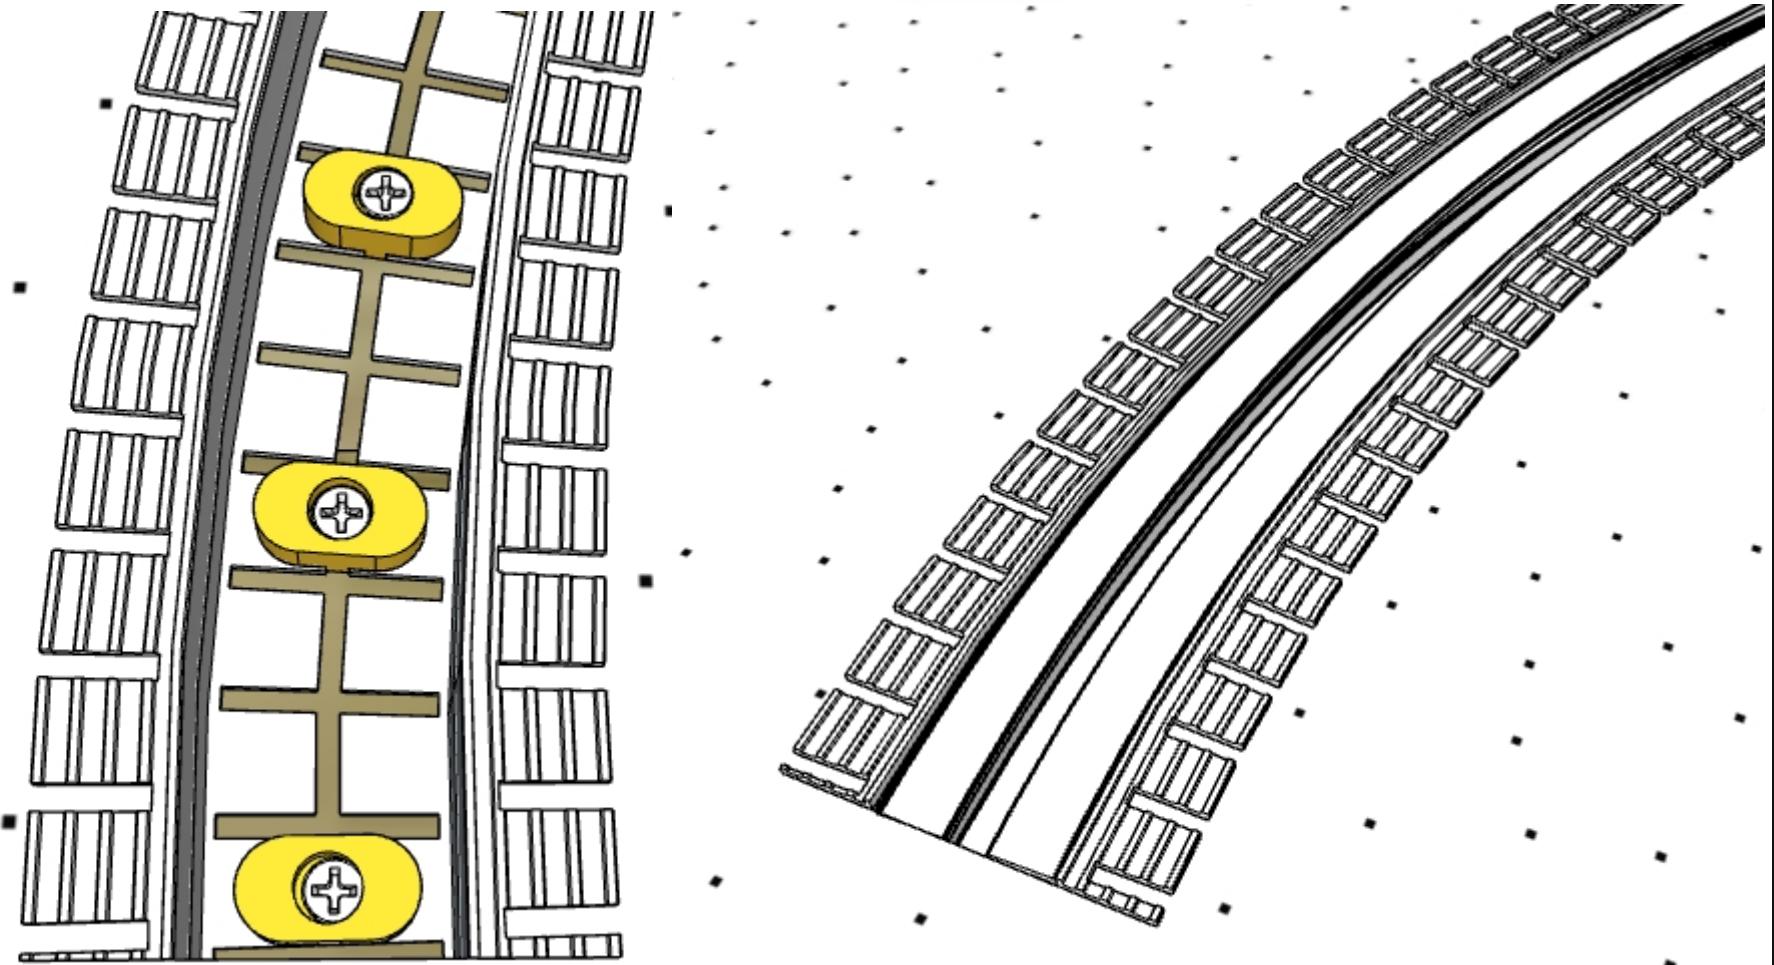

PerfectFit

Step 8 - Install Screws


Install screws into the mud flanges

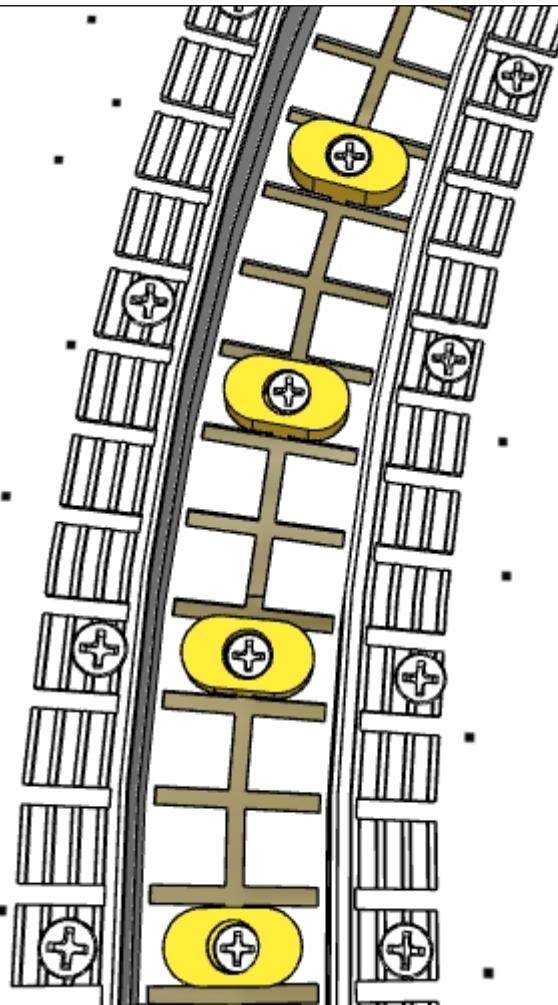

 **PerfectFit**

Note: When installing the track into the cavity, it may be necessary to remove spacers that align with track mounting brackets.

Installation of the bendable PerfectFit Cavity is complete.
Please proceed to the standard straight DTC installation instructions to complete your system.

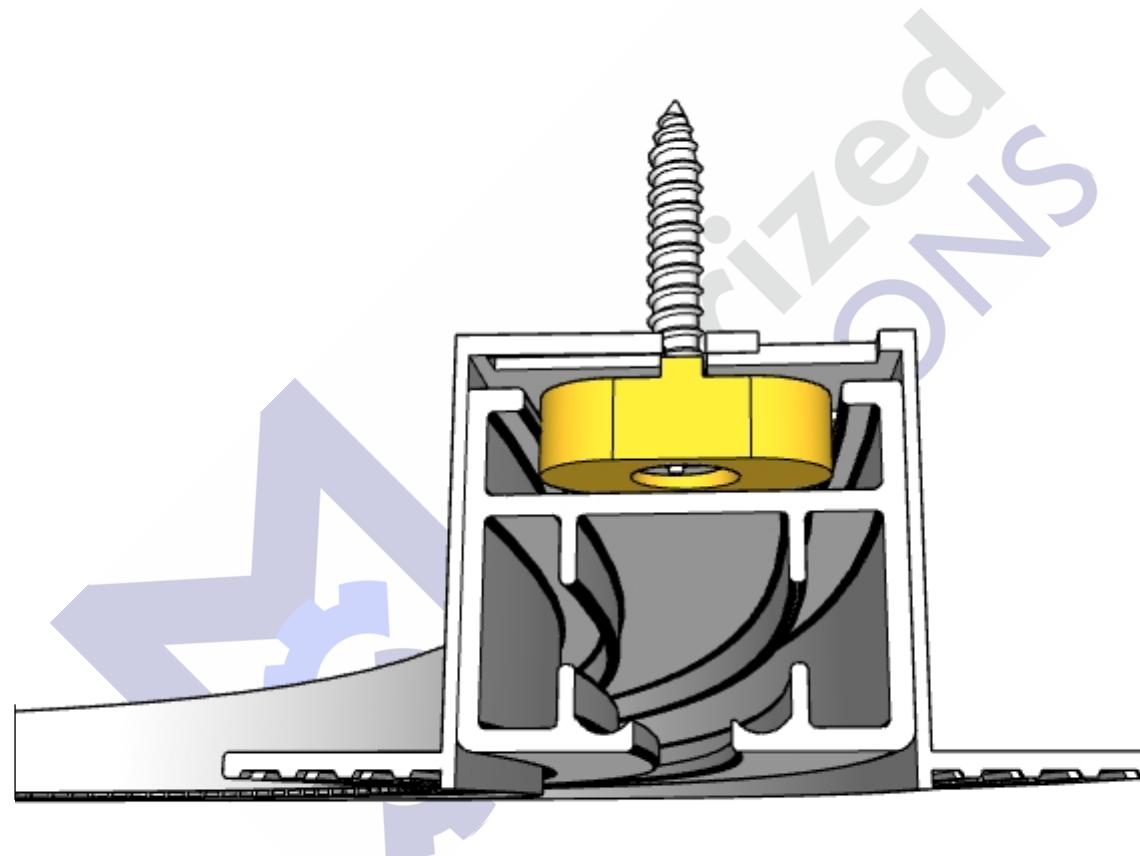

PerfectFit