
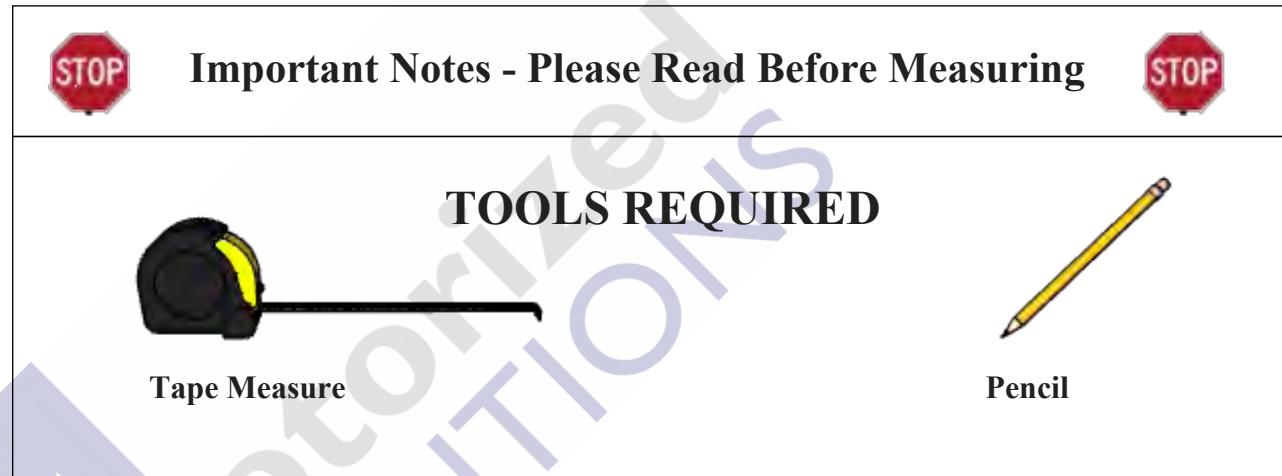


PerfectFit Drapery Track Cavity Measuring Instructions


Congratulations on your purchase of a specialty system from DEL Motorized Solutions.

If you have any questions, please call technical support at 1-866-446-6867

or email us at info@motorizedsolutions.com

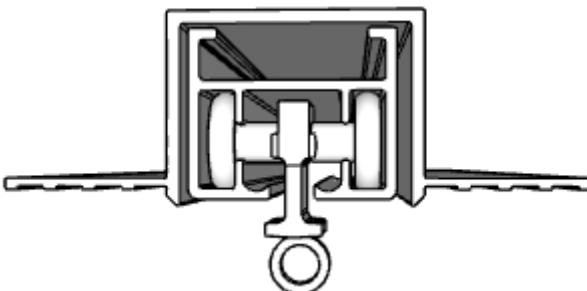

***Order Your Track As
Recessed w/Wood Screw Anchor Mount**

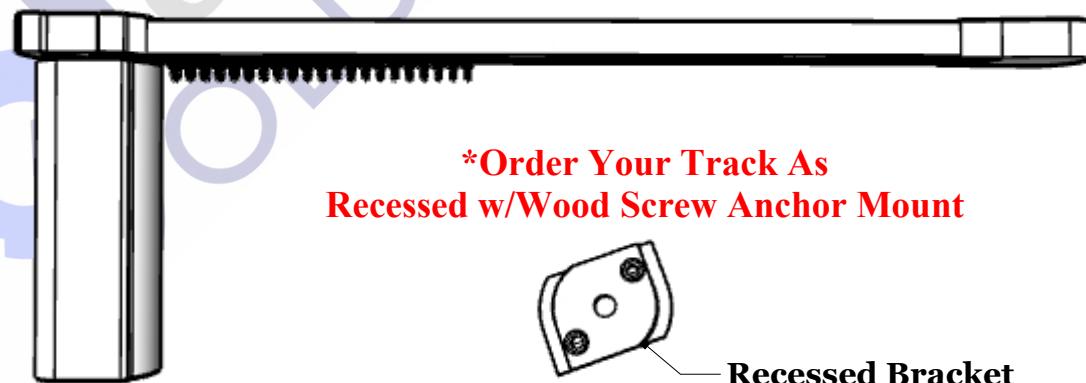


Recessed Bracket

PerfectFit




**Accurately measure the inside of the recessed system.
Deduct 1/8" for inside mount.**

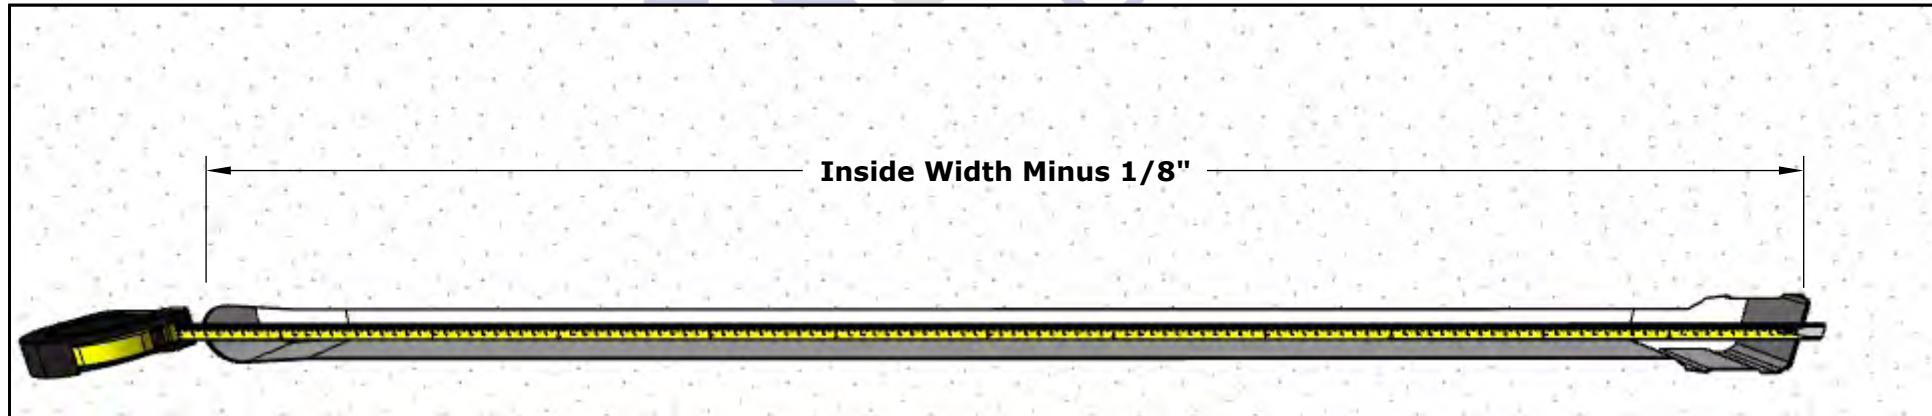


PerfectFit

*Measuring Tip

Draw a Line 1" in from the right end.


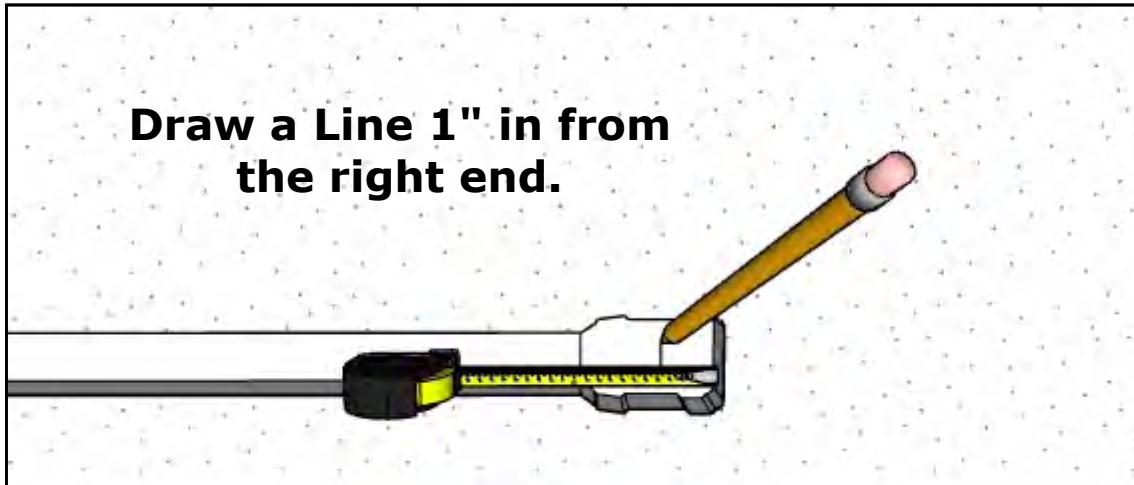


Accurately measure from the base of the left end to the pencil line and add 1"

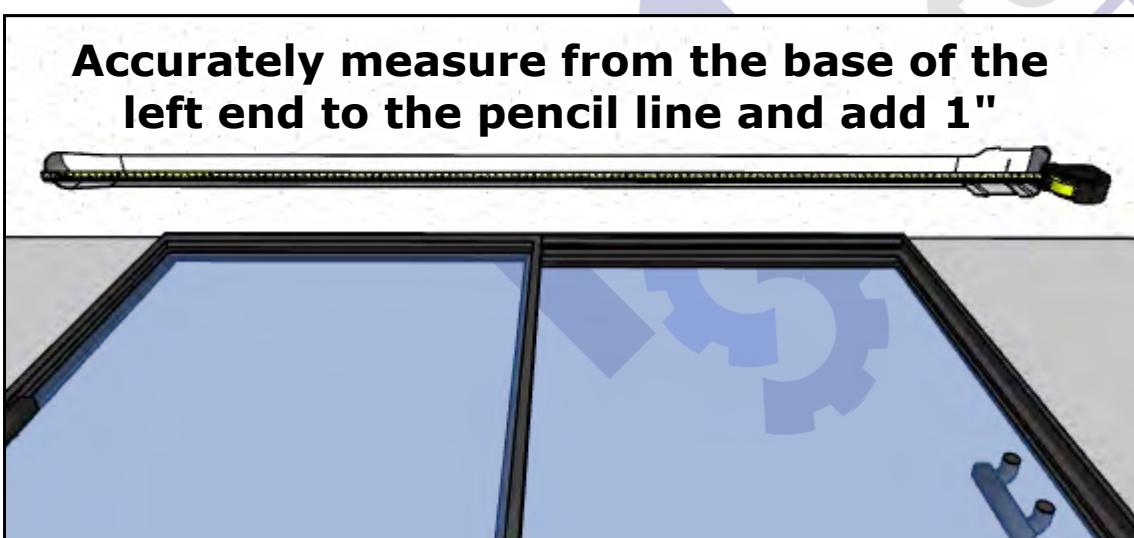

• Measure to the pencil line and add 1"

Then deduct 1/8" for inside mount.

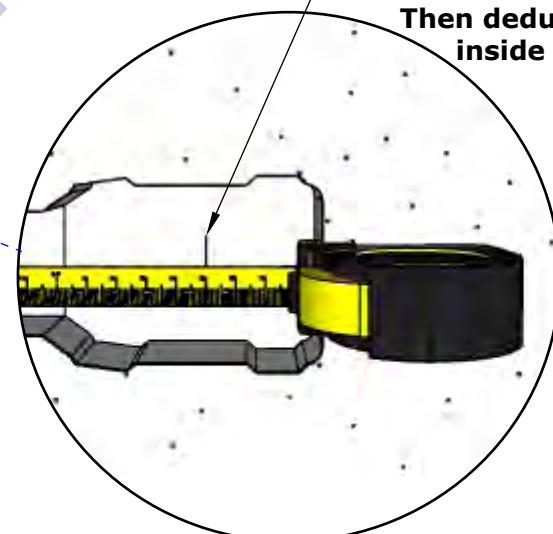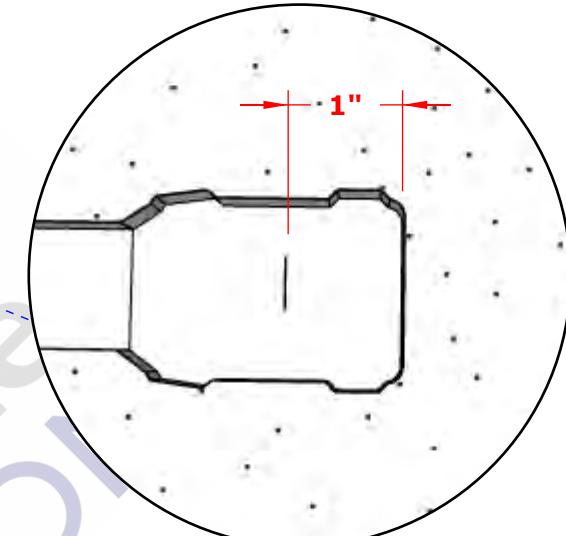

PerfectFit