

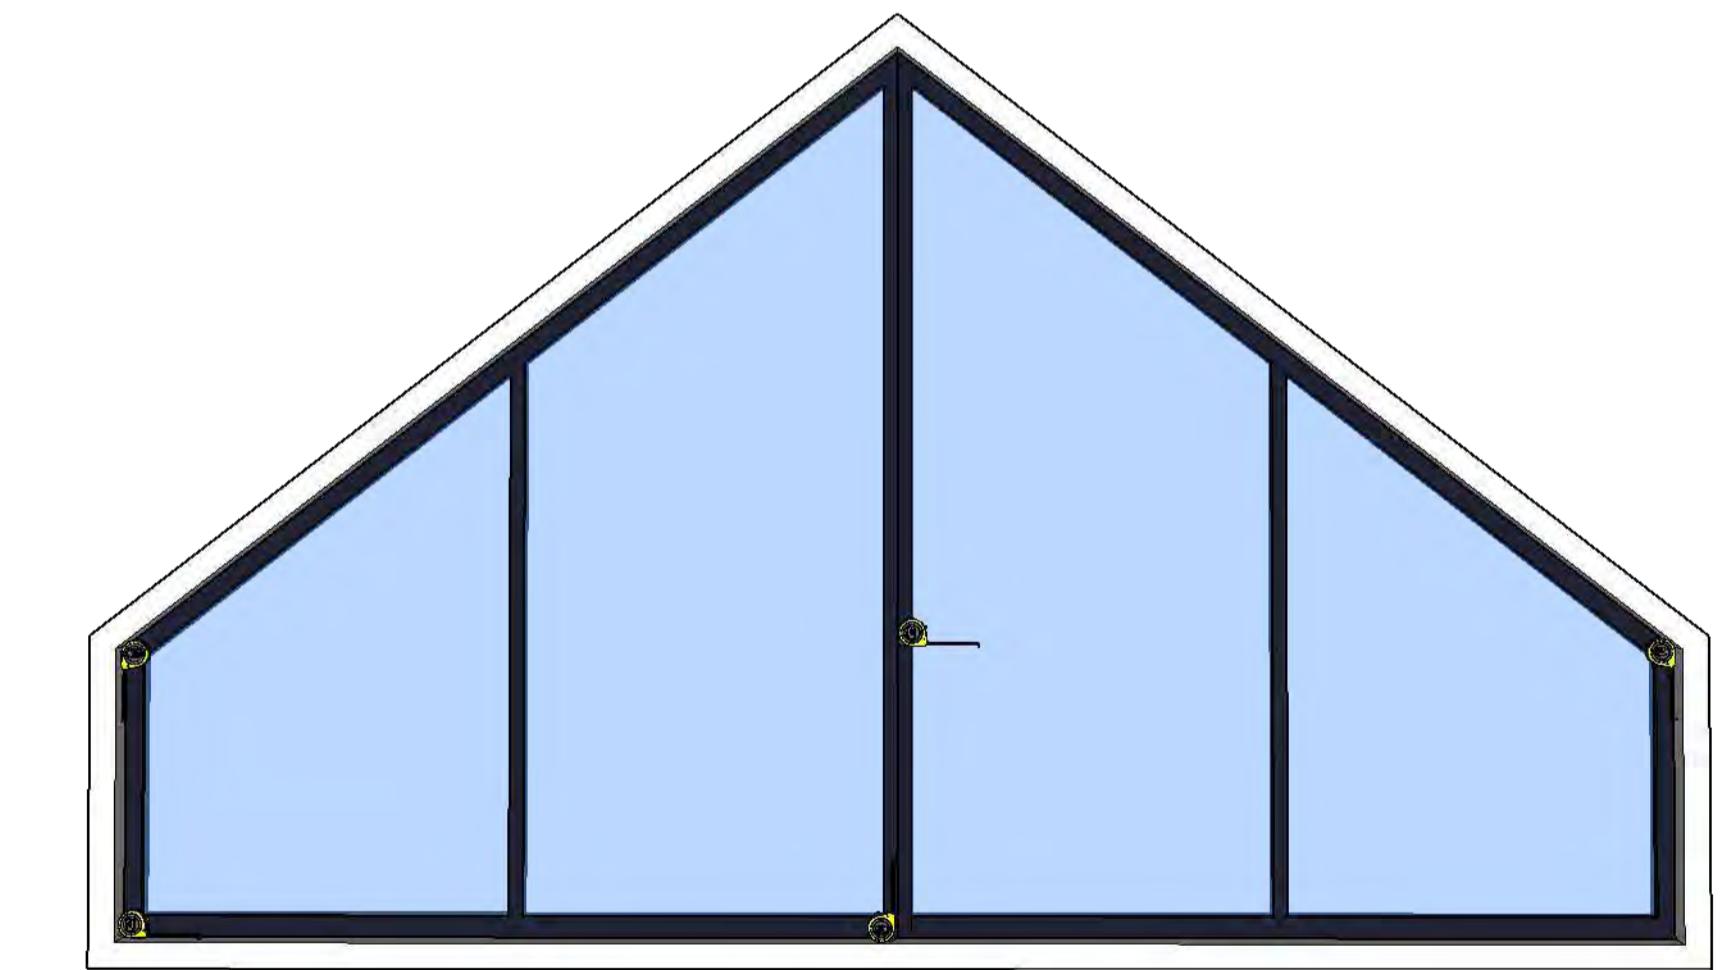
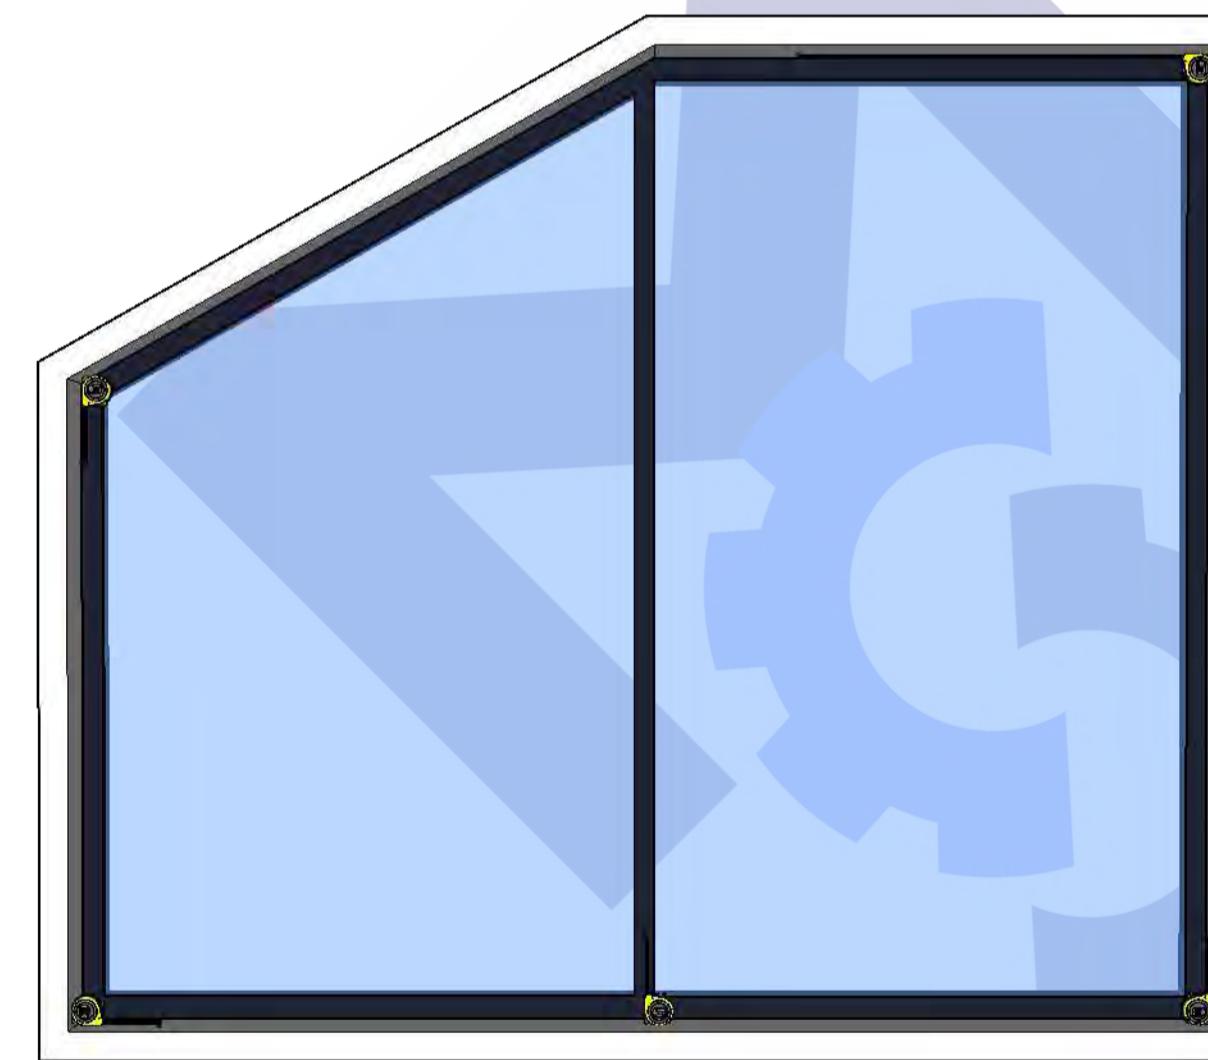


Bottom-up Roller Shade Inside Mount Measurements


Notes:

1. All measurements should be accurate to the 1/16".
2. Use a rigid tape measure for all dimensions.
3. Insert your dimensions into the DEL Motorized Solutions measure template form. Contact our sales team for a template appropriate to your window application.
4. This guide is intended for inside mount applications with the most popular shaped windows. If your window opening is outside mount or differs from what is depicted, please contact our sales team for instructions.

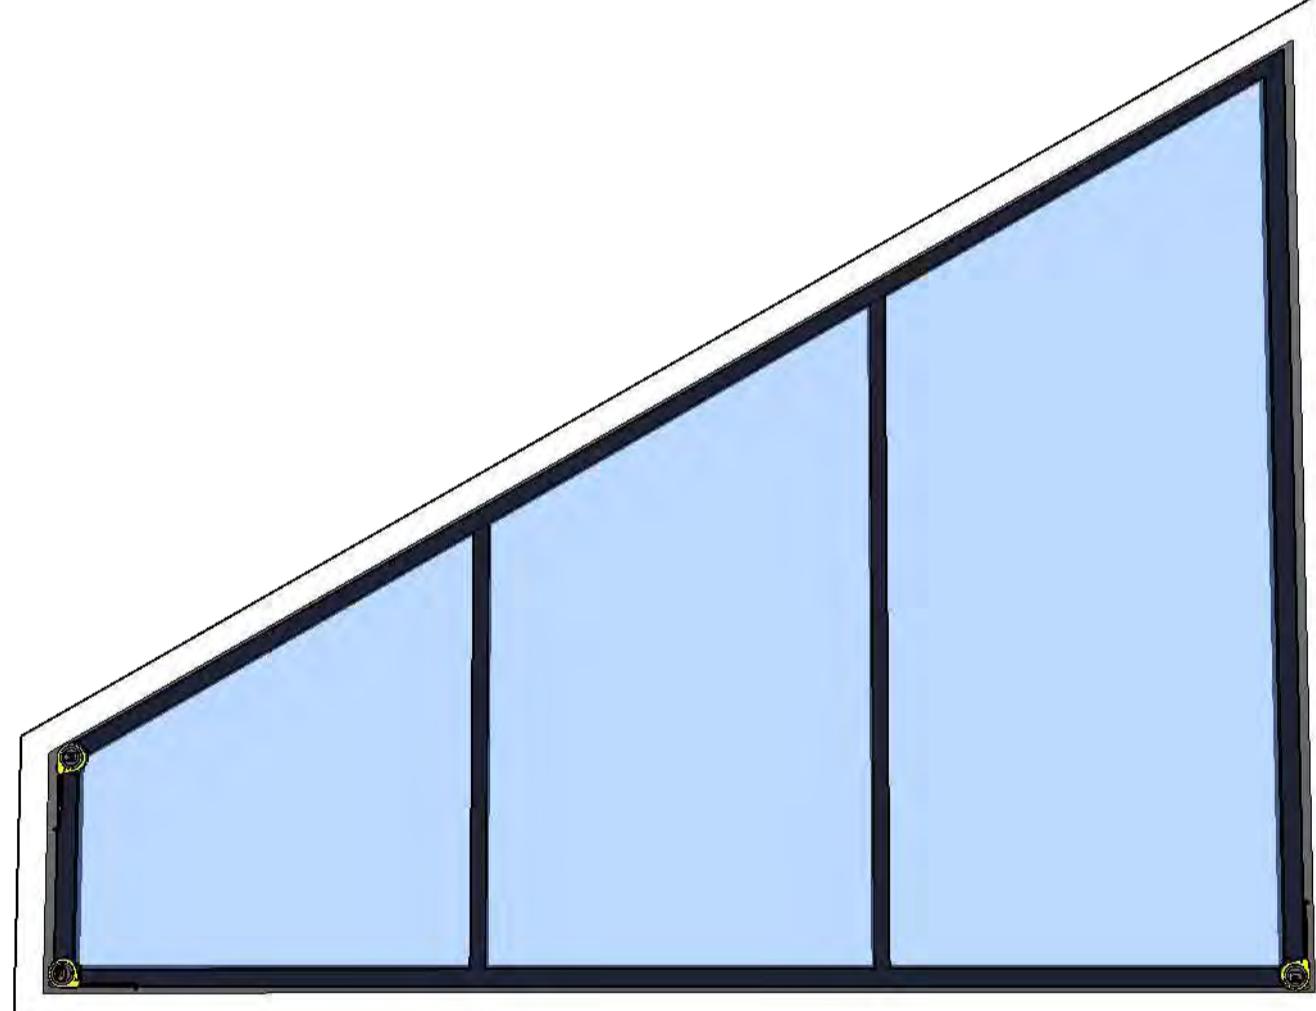


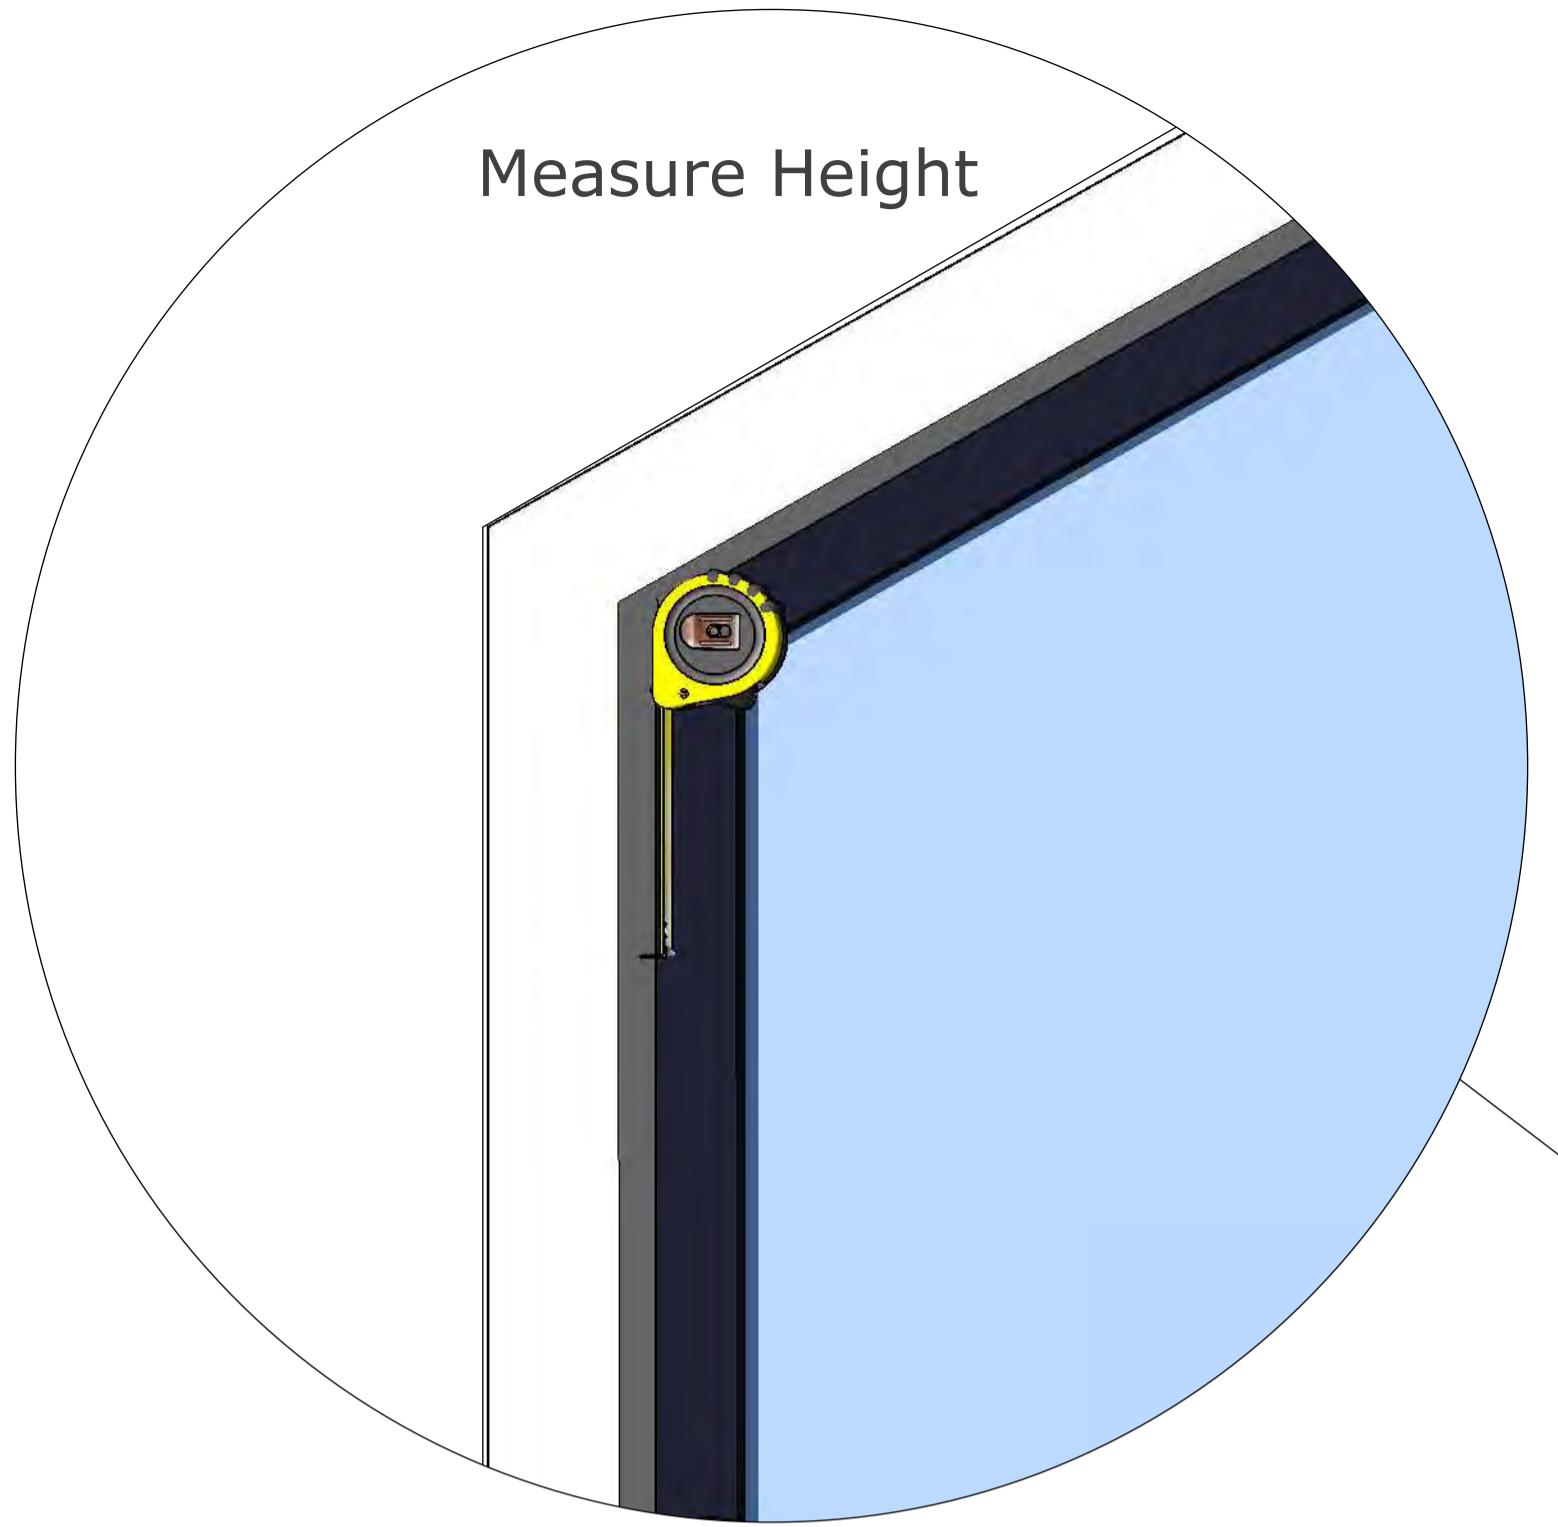


Measure Height

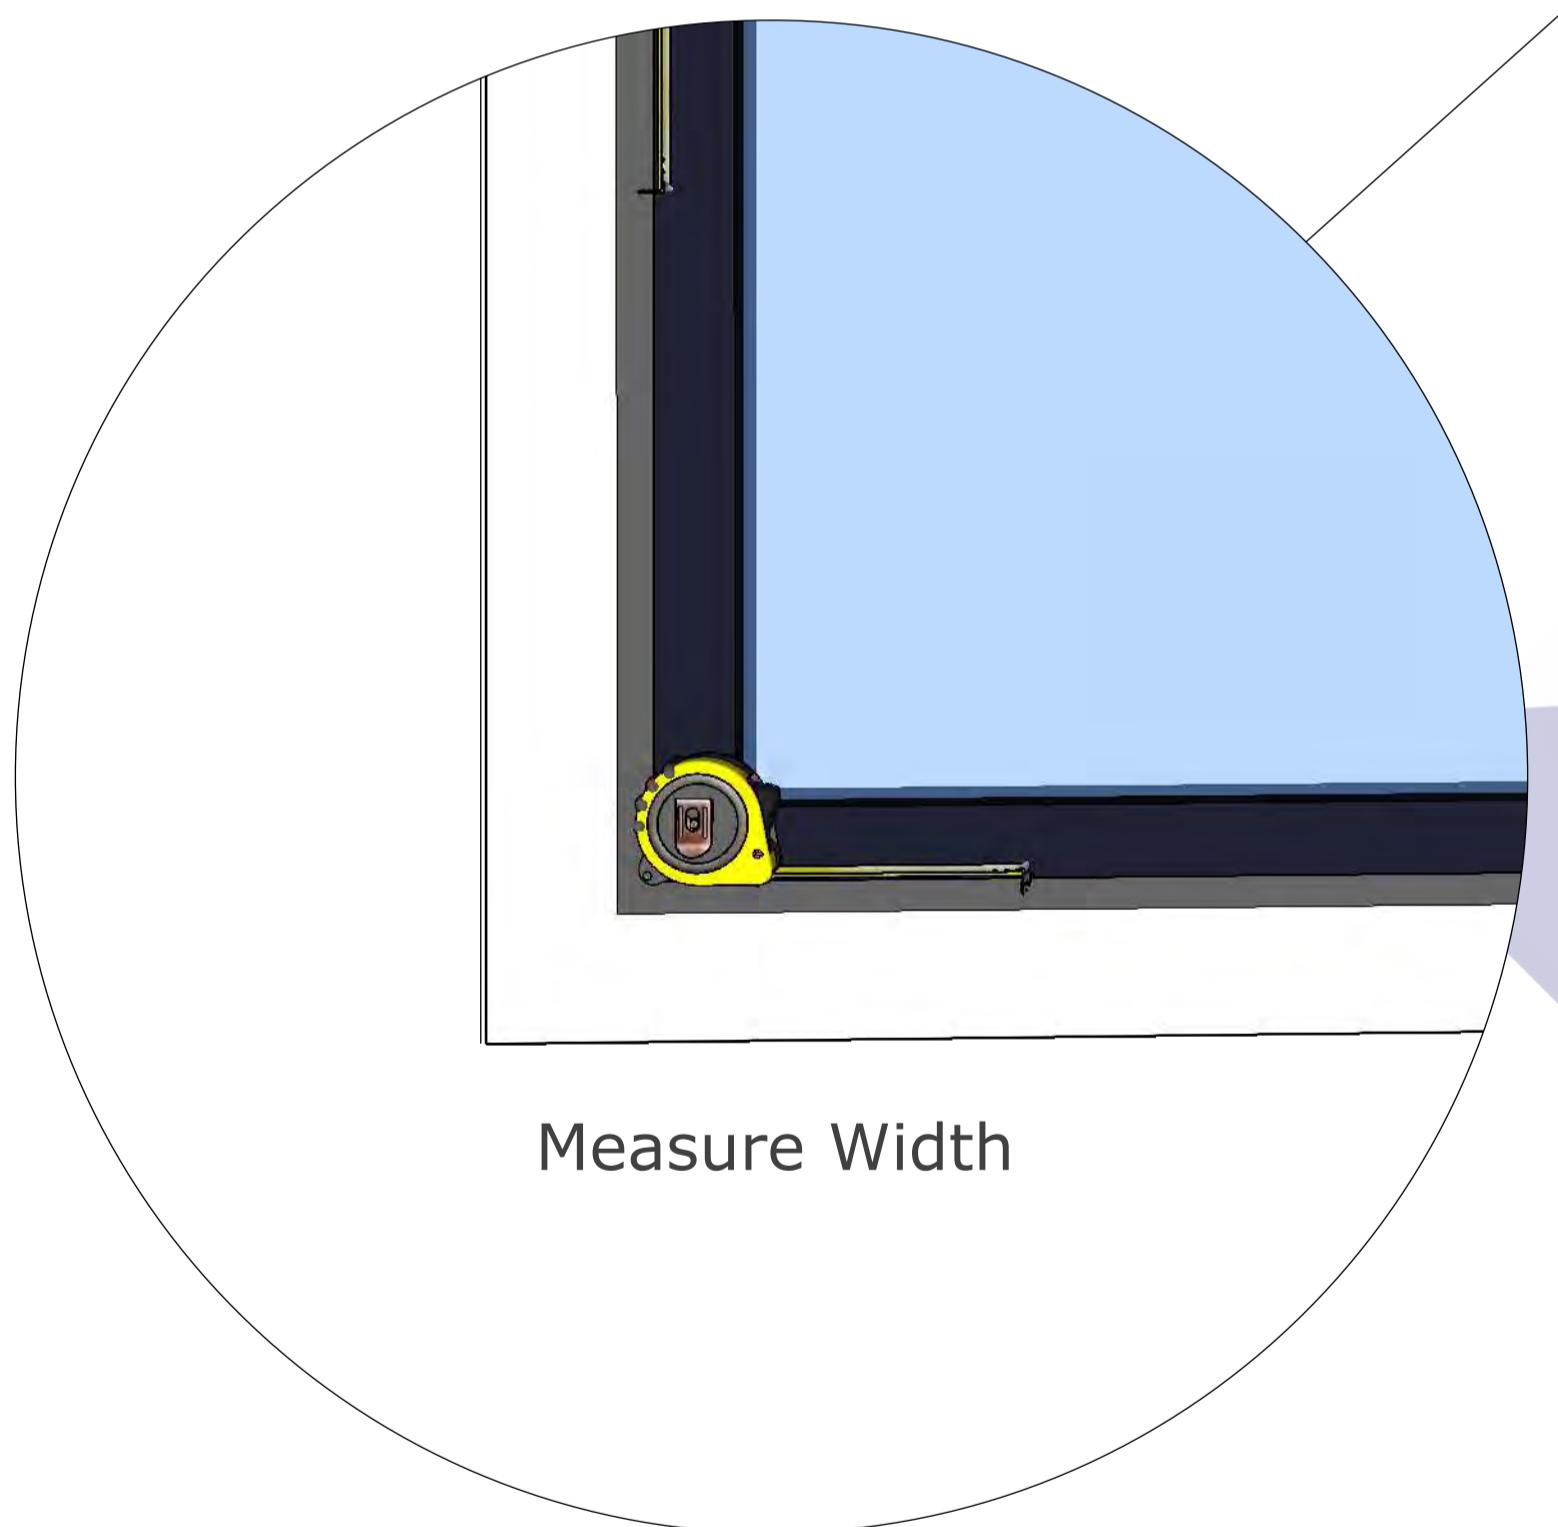


Measure Width

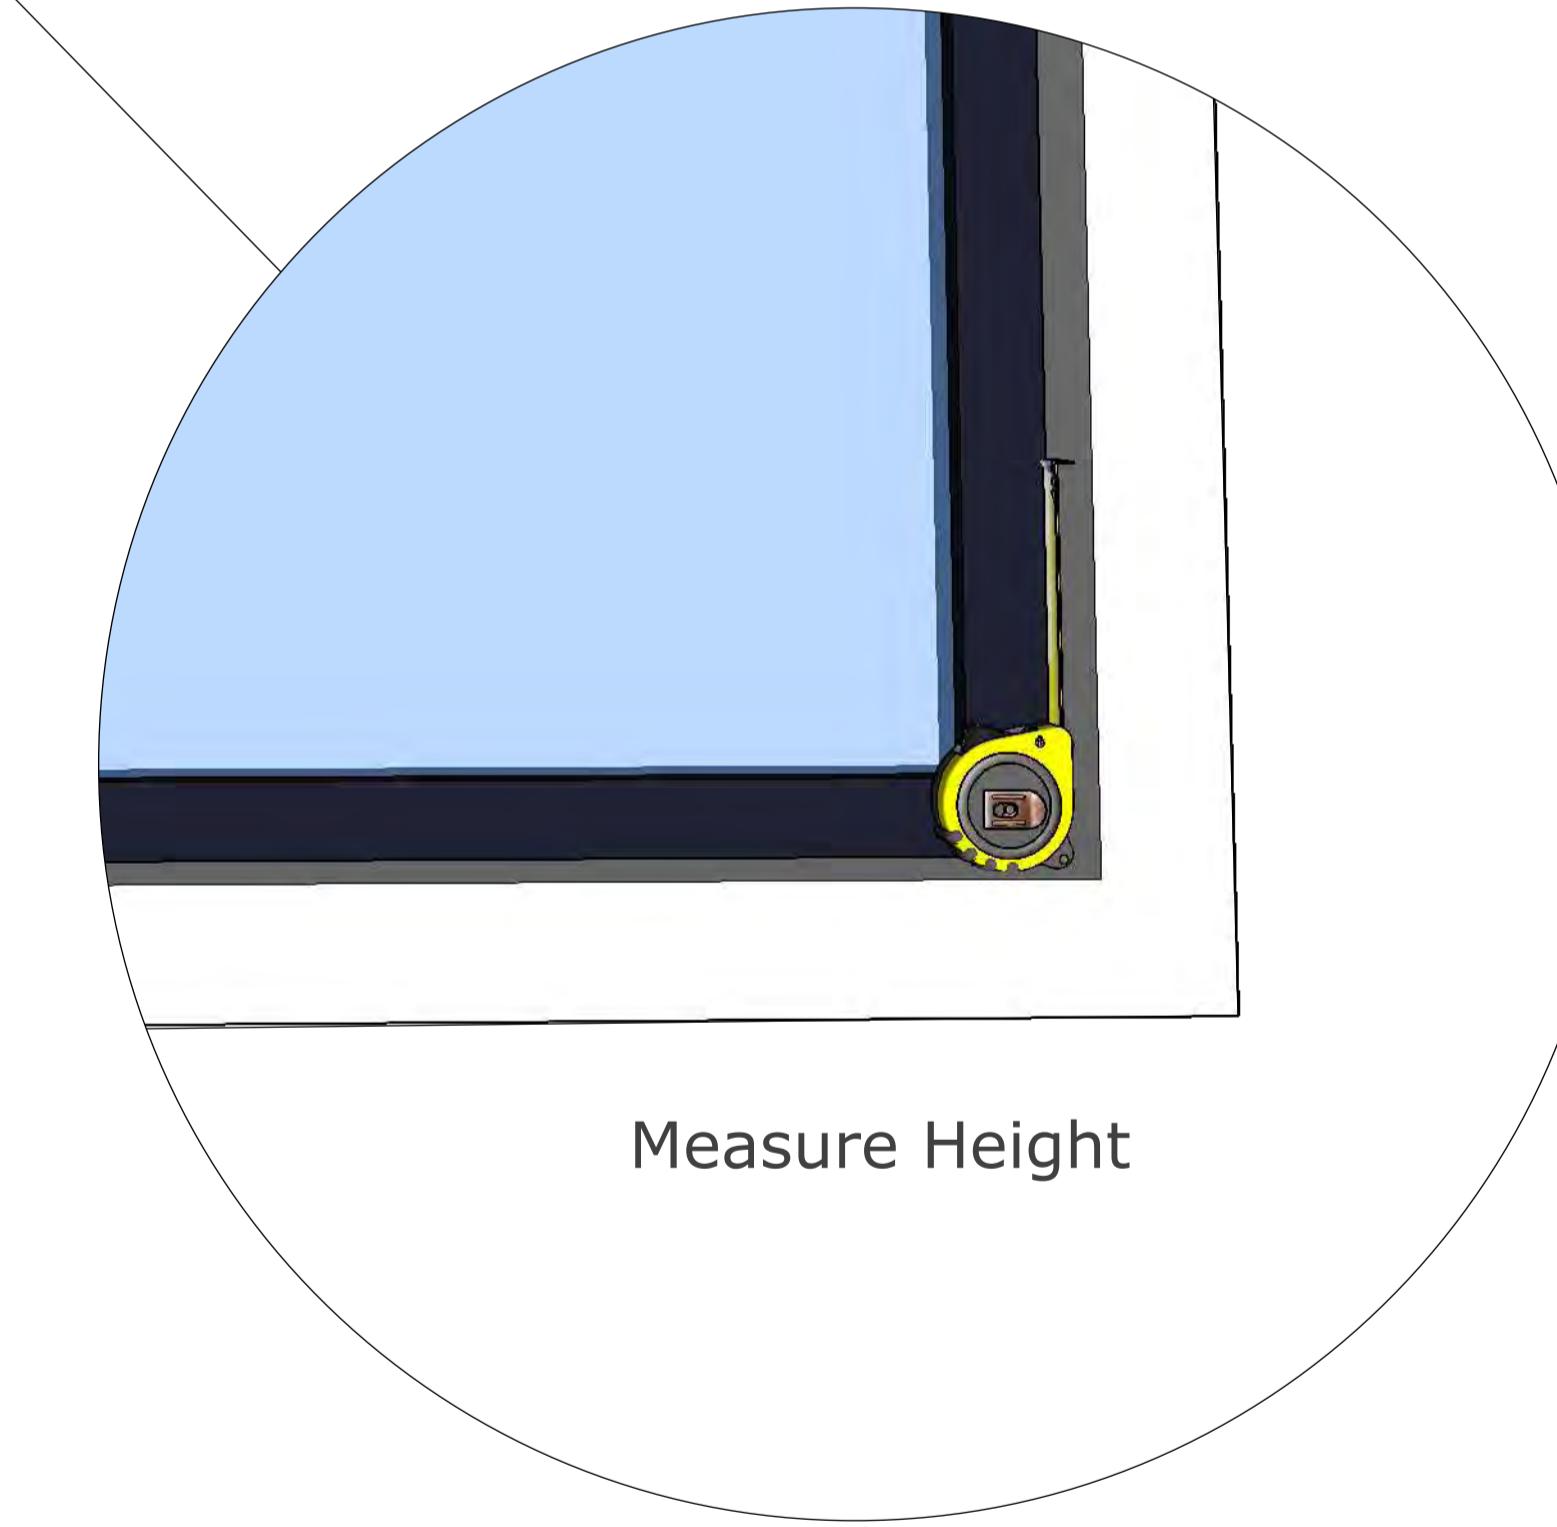


Measure Height

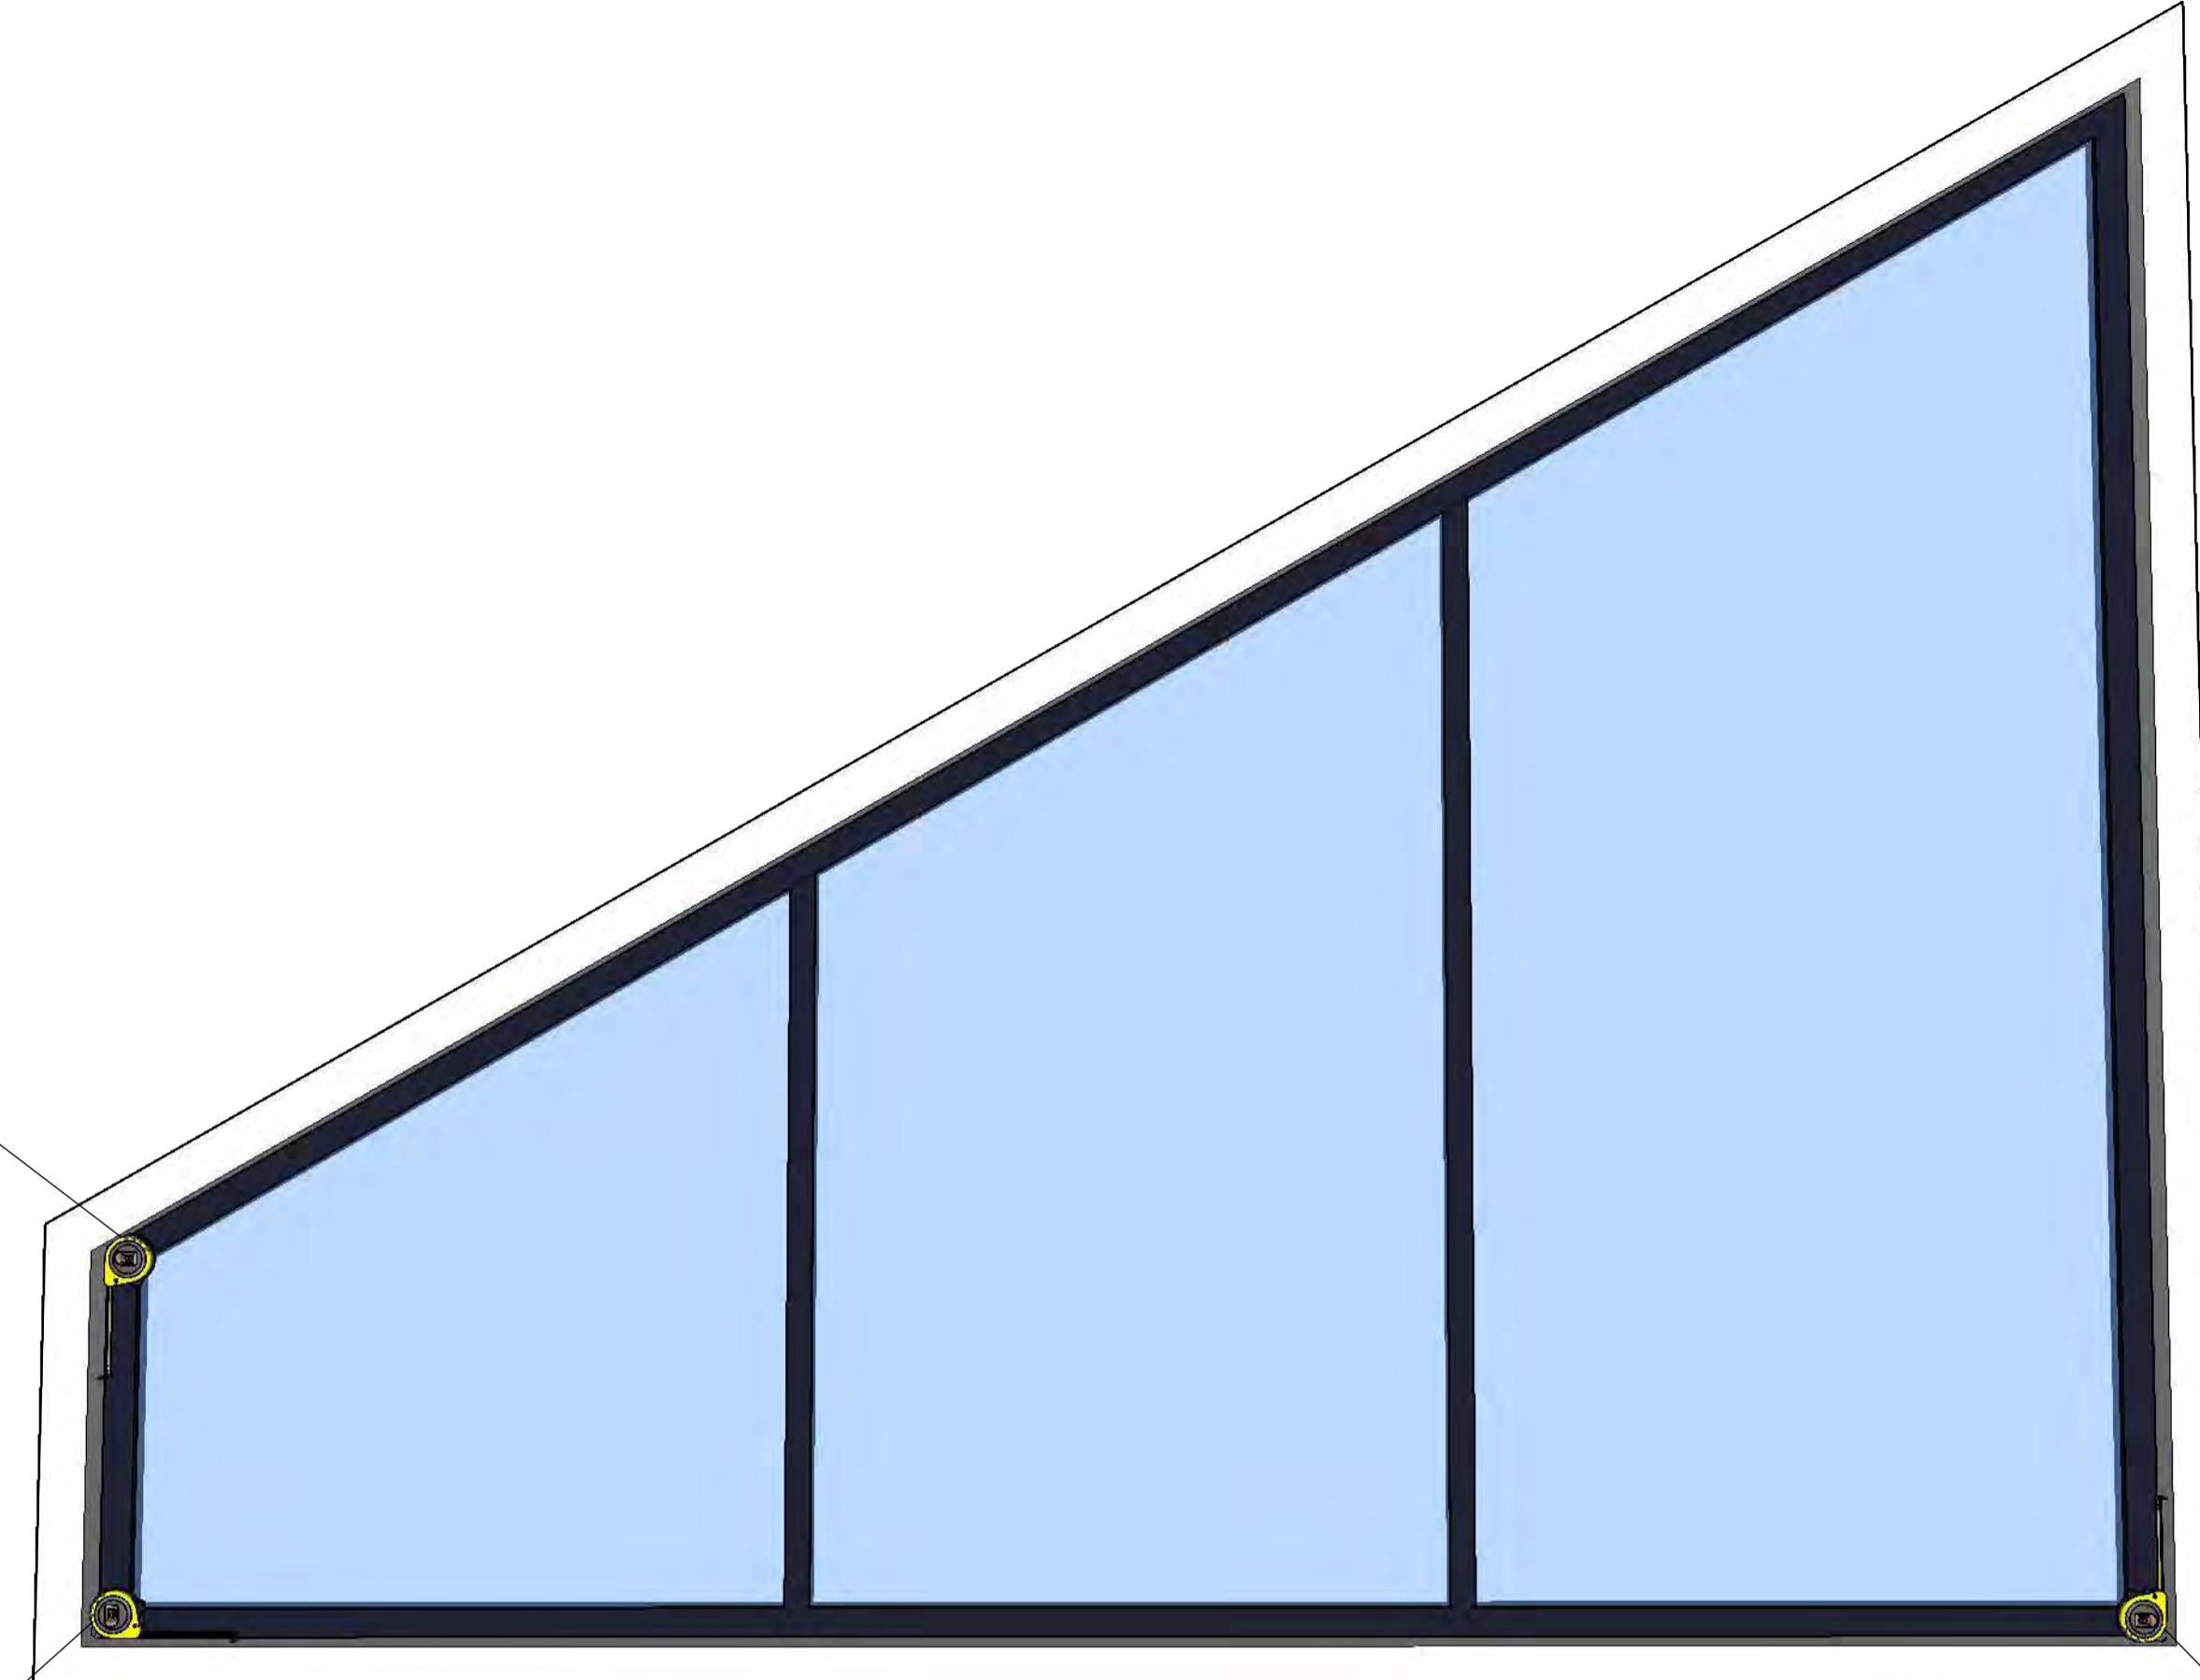

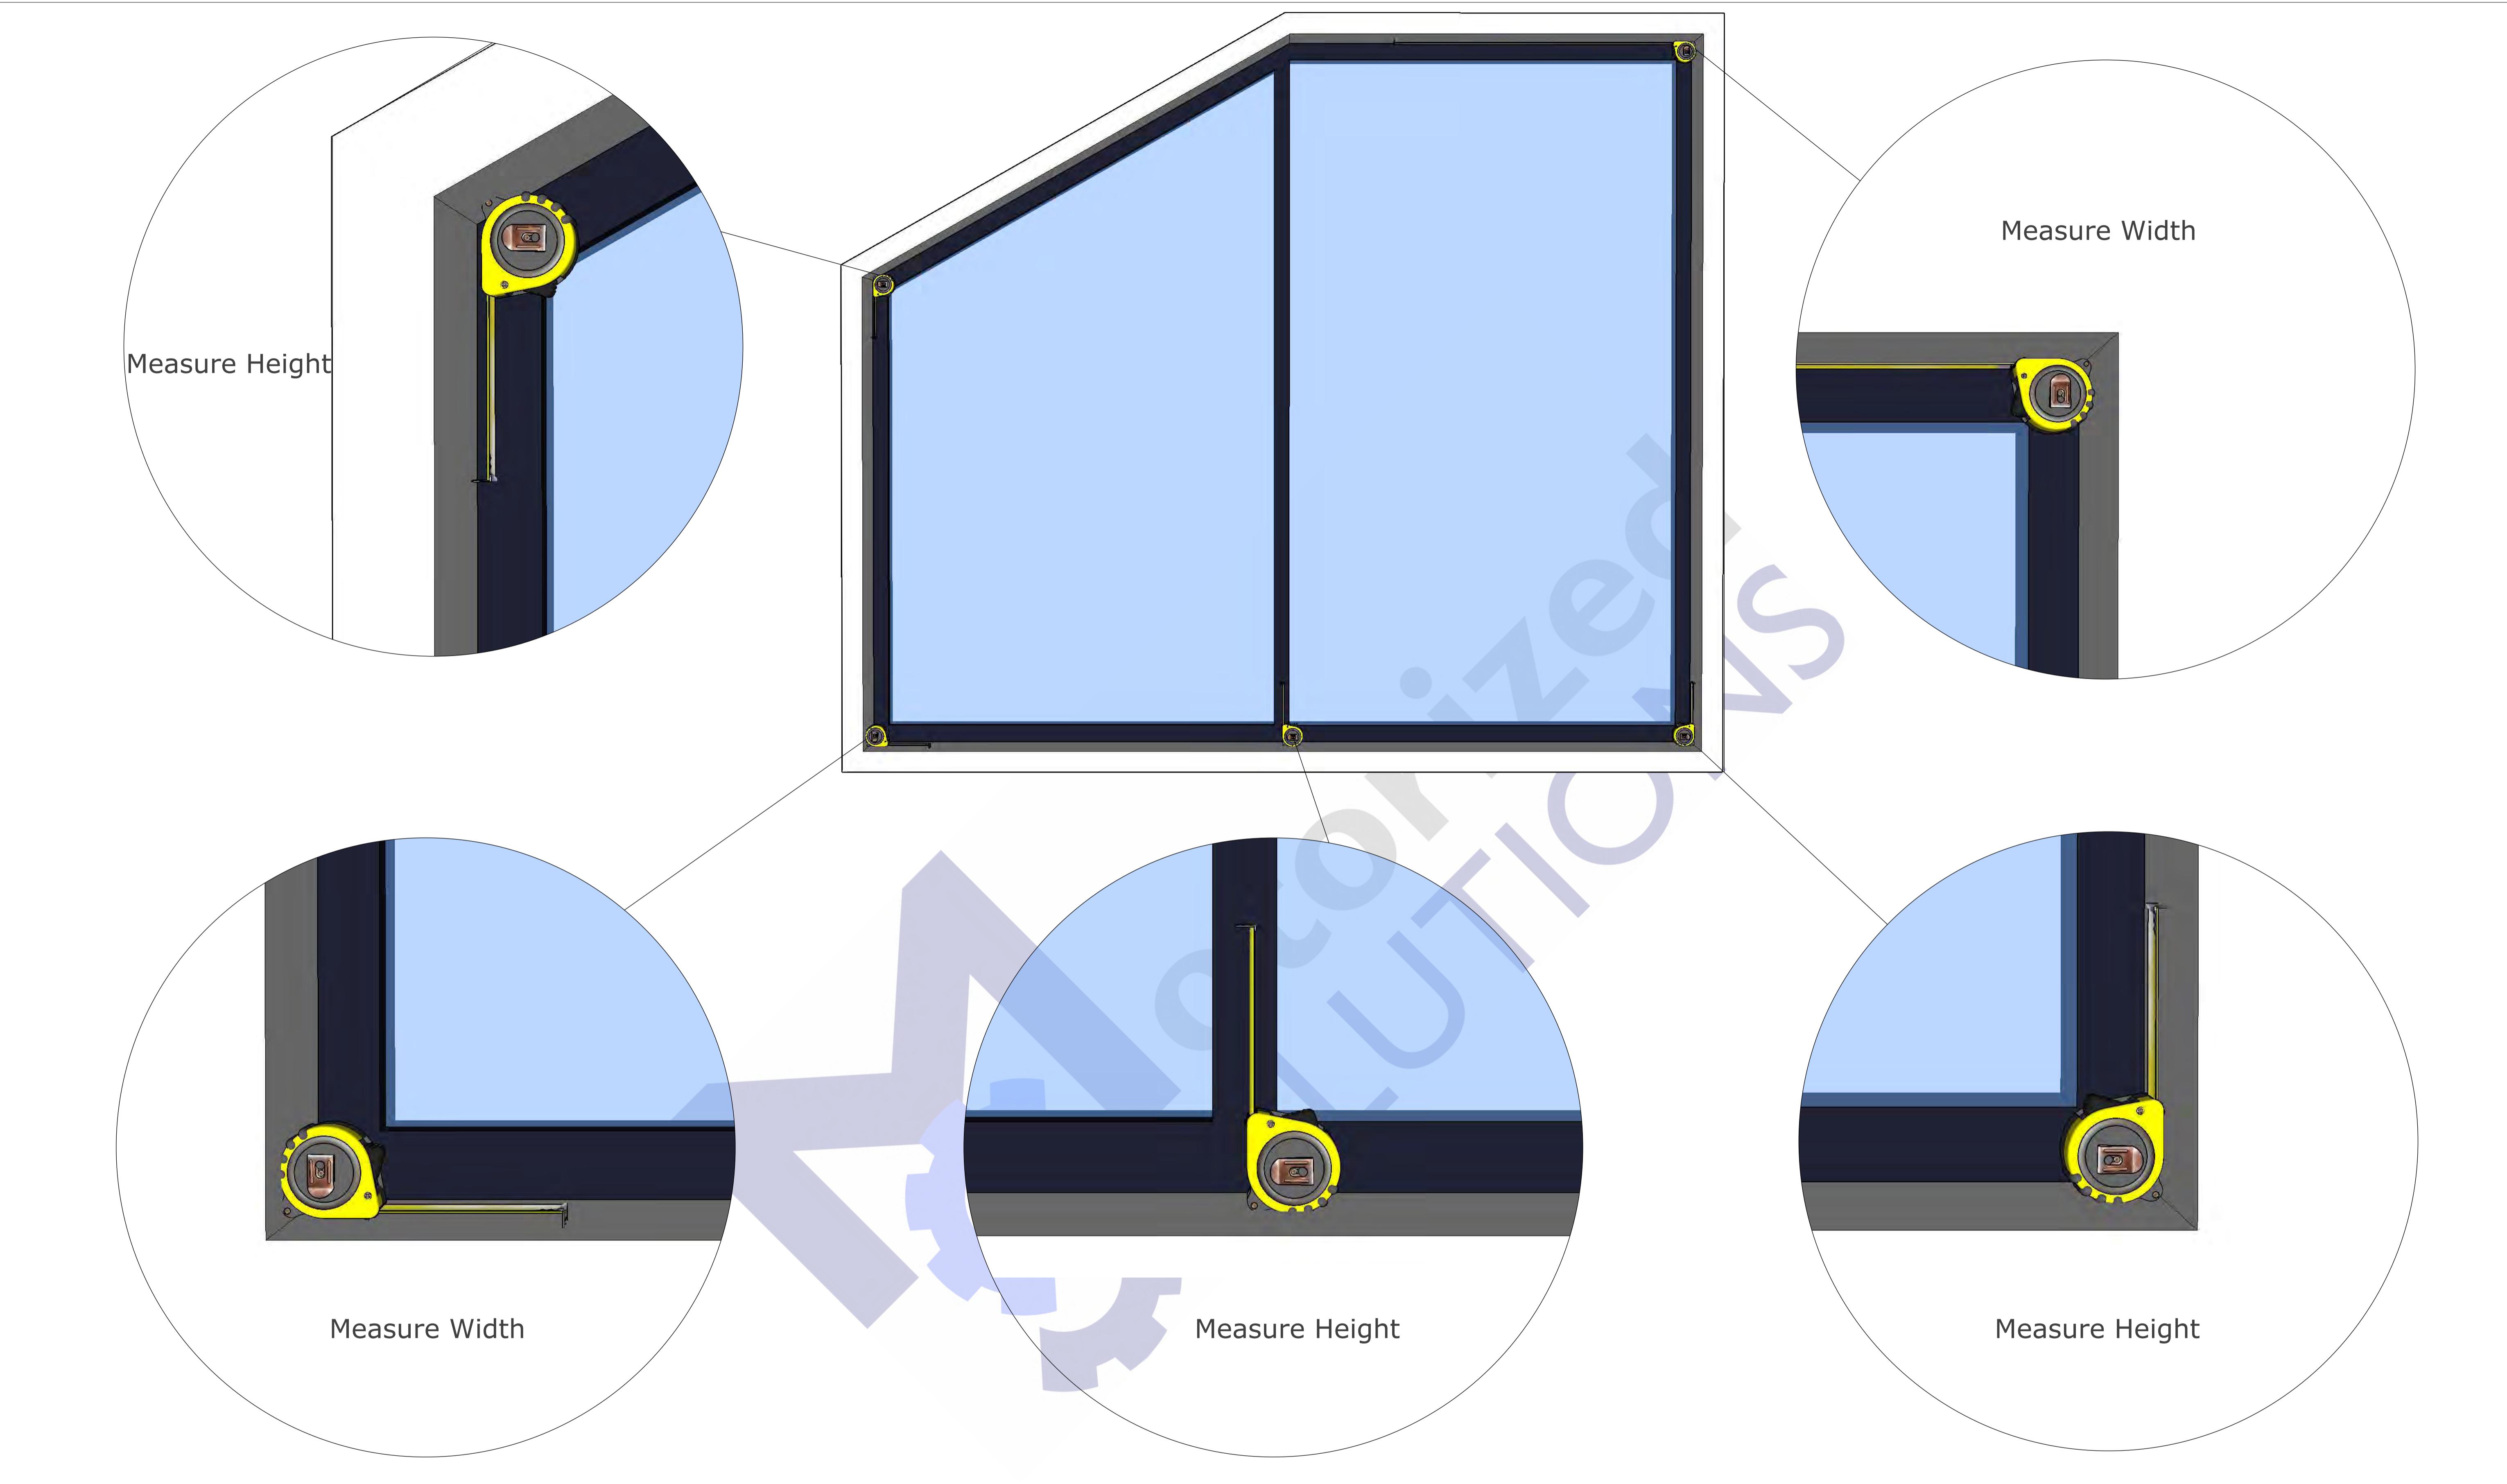


 **CONTOUR**
by Motorized Solutions
866-44-MOTOR




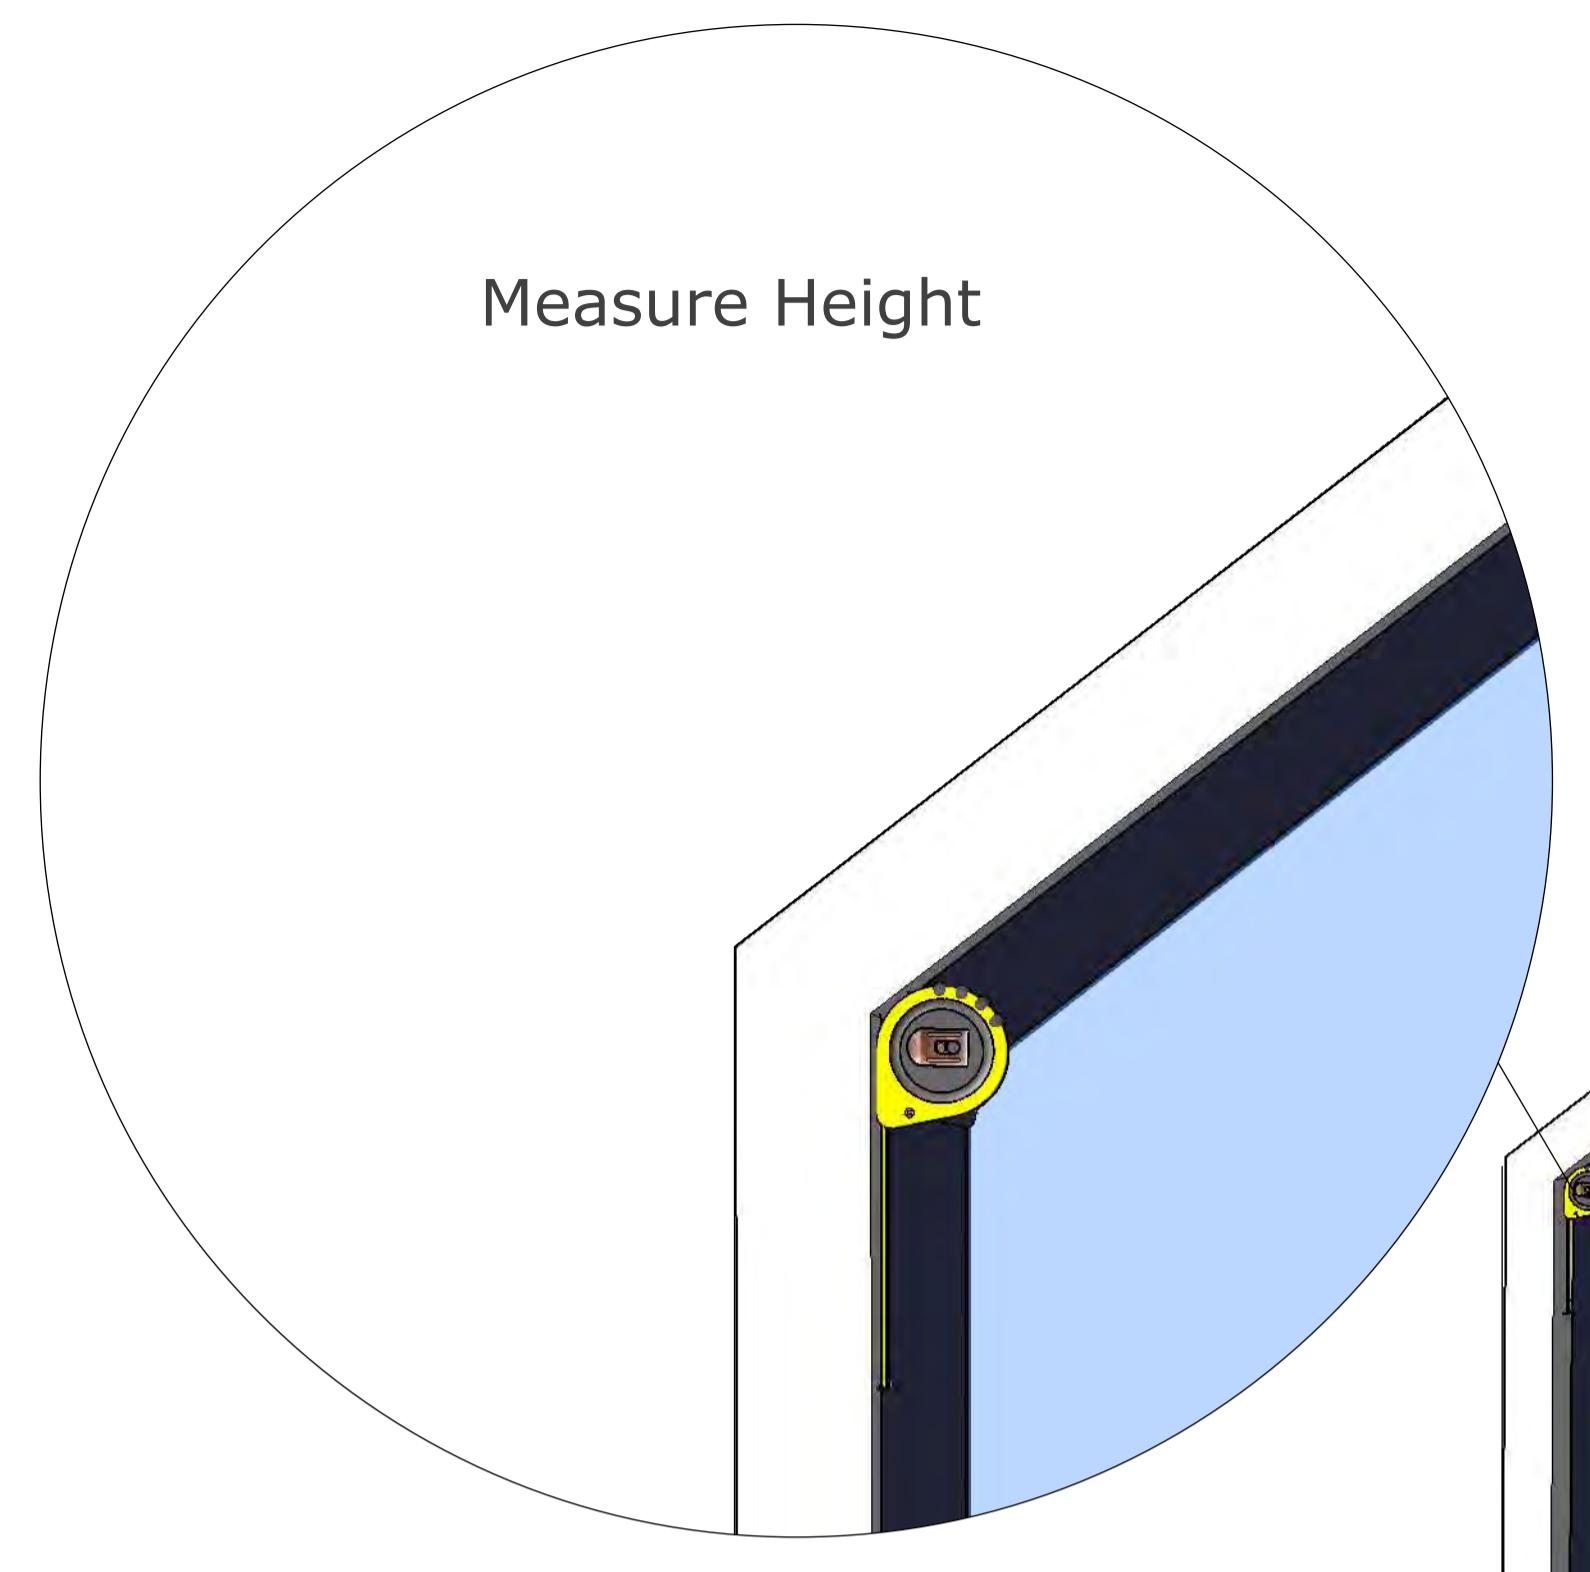


Measure Height

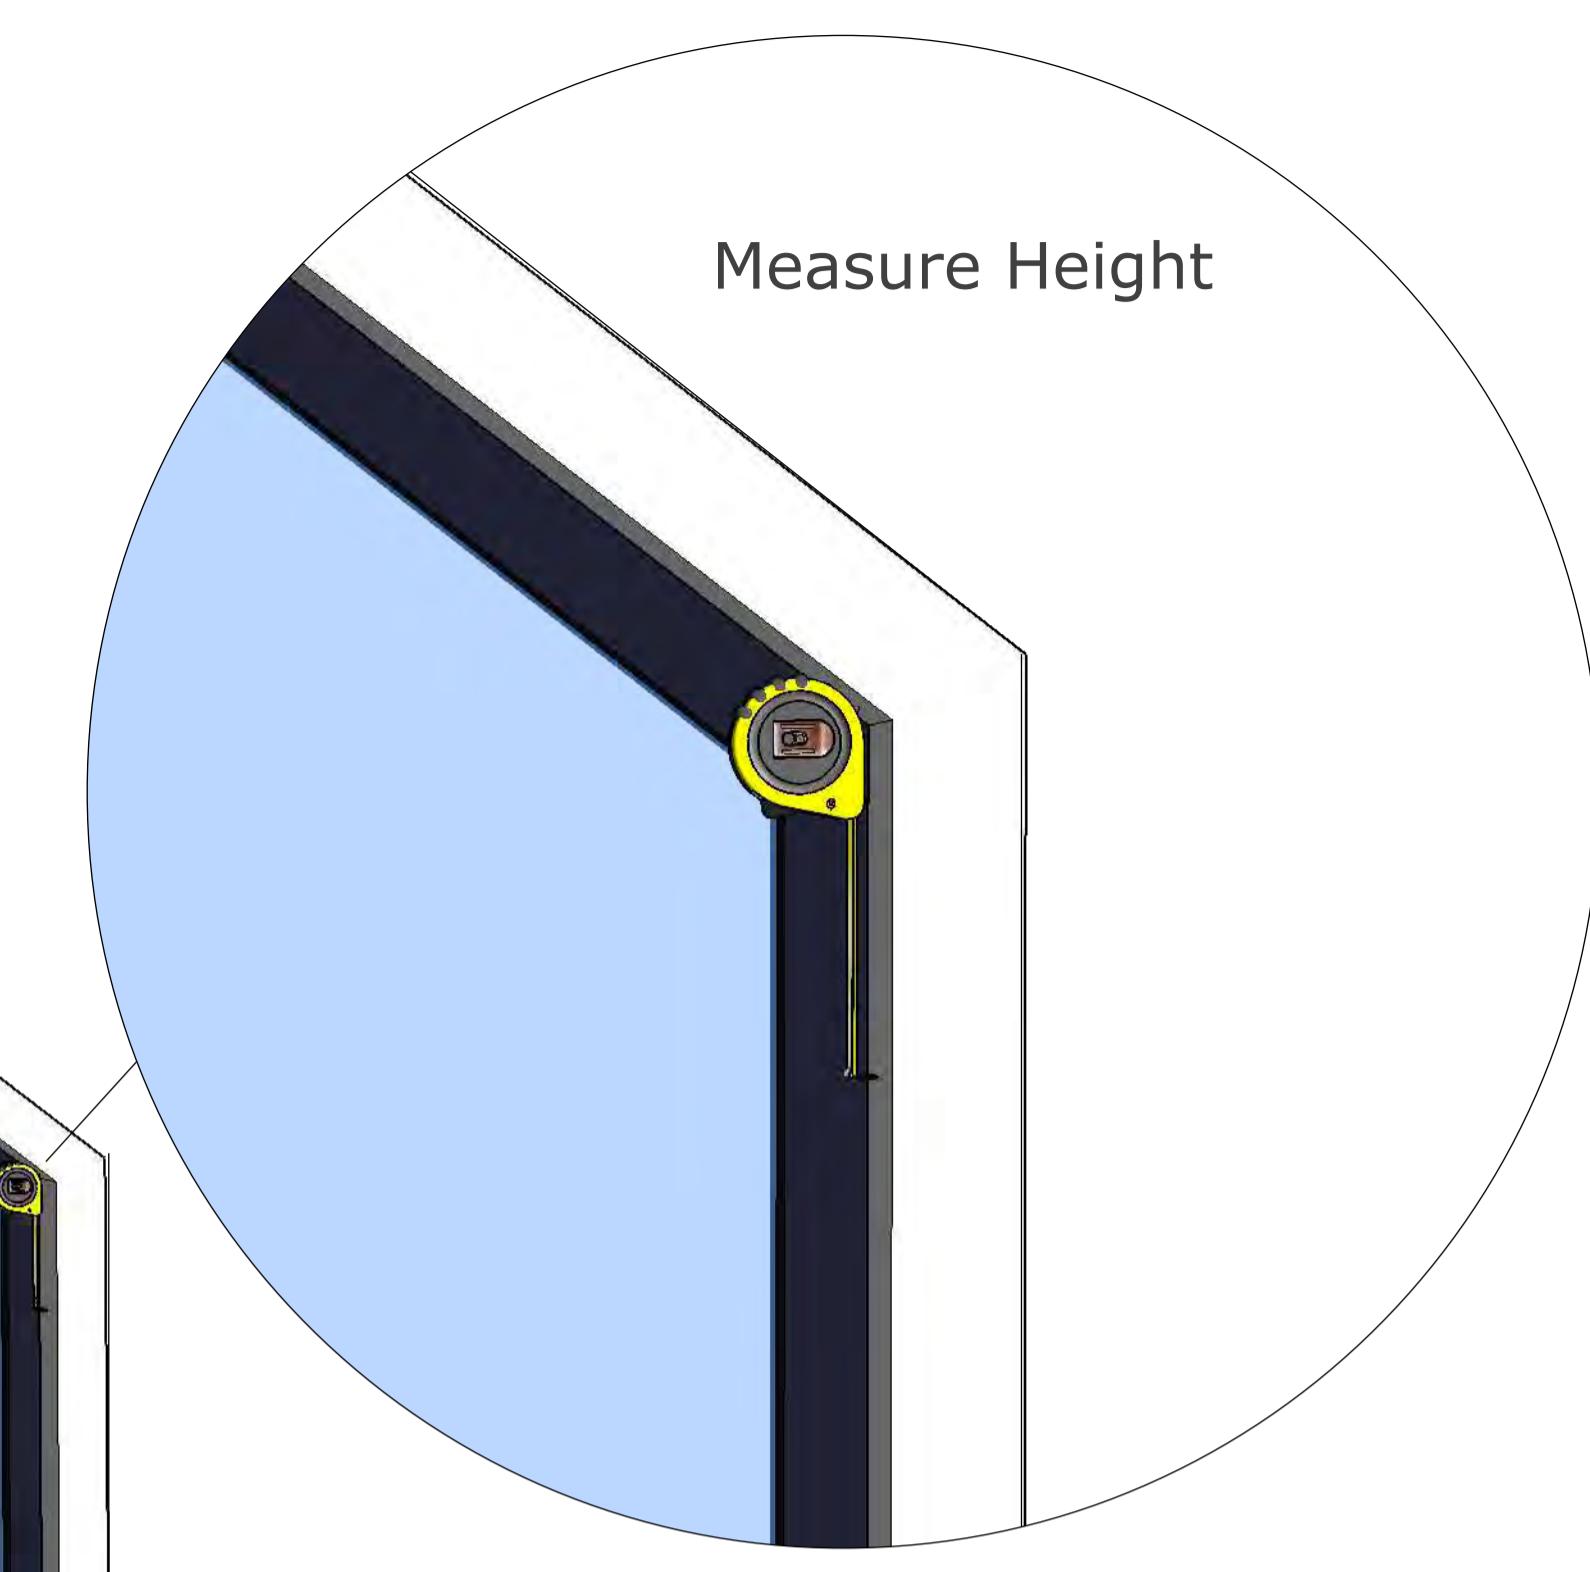


Measure Height

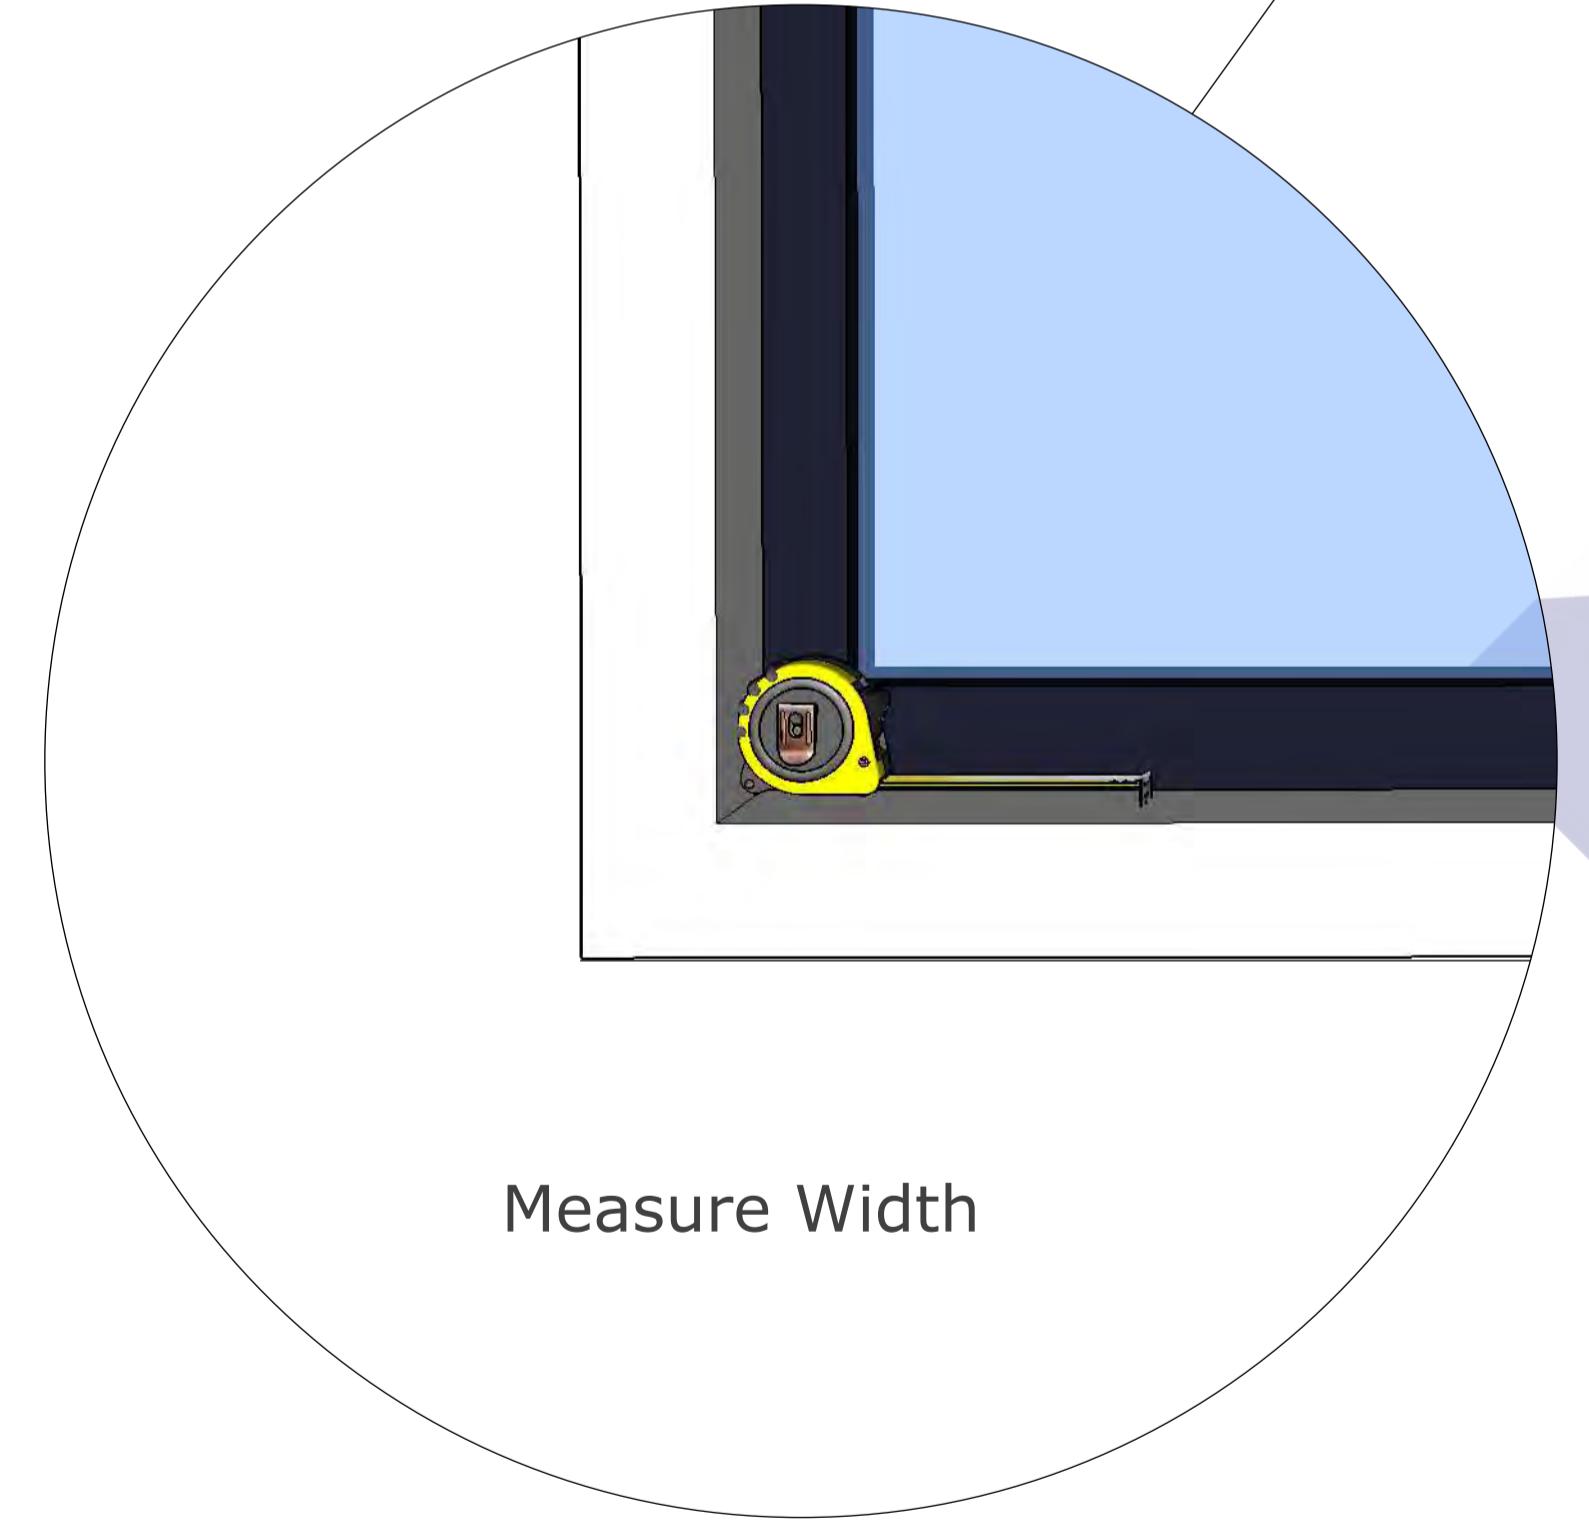

Measure Width

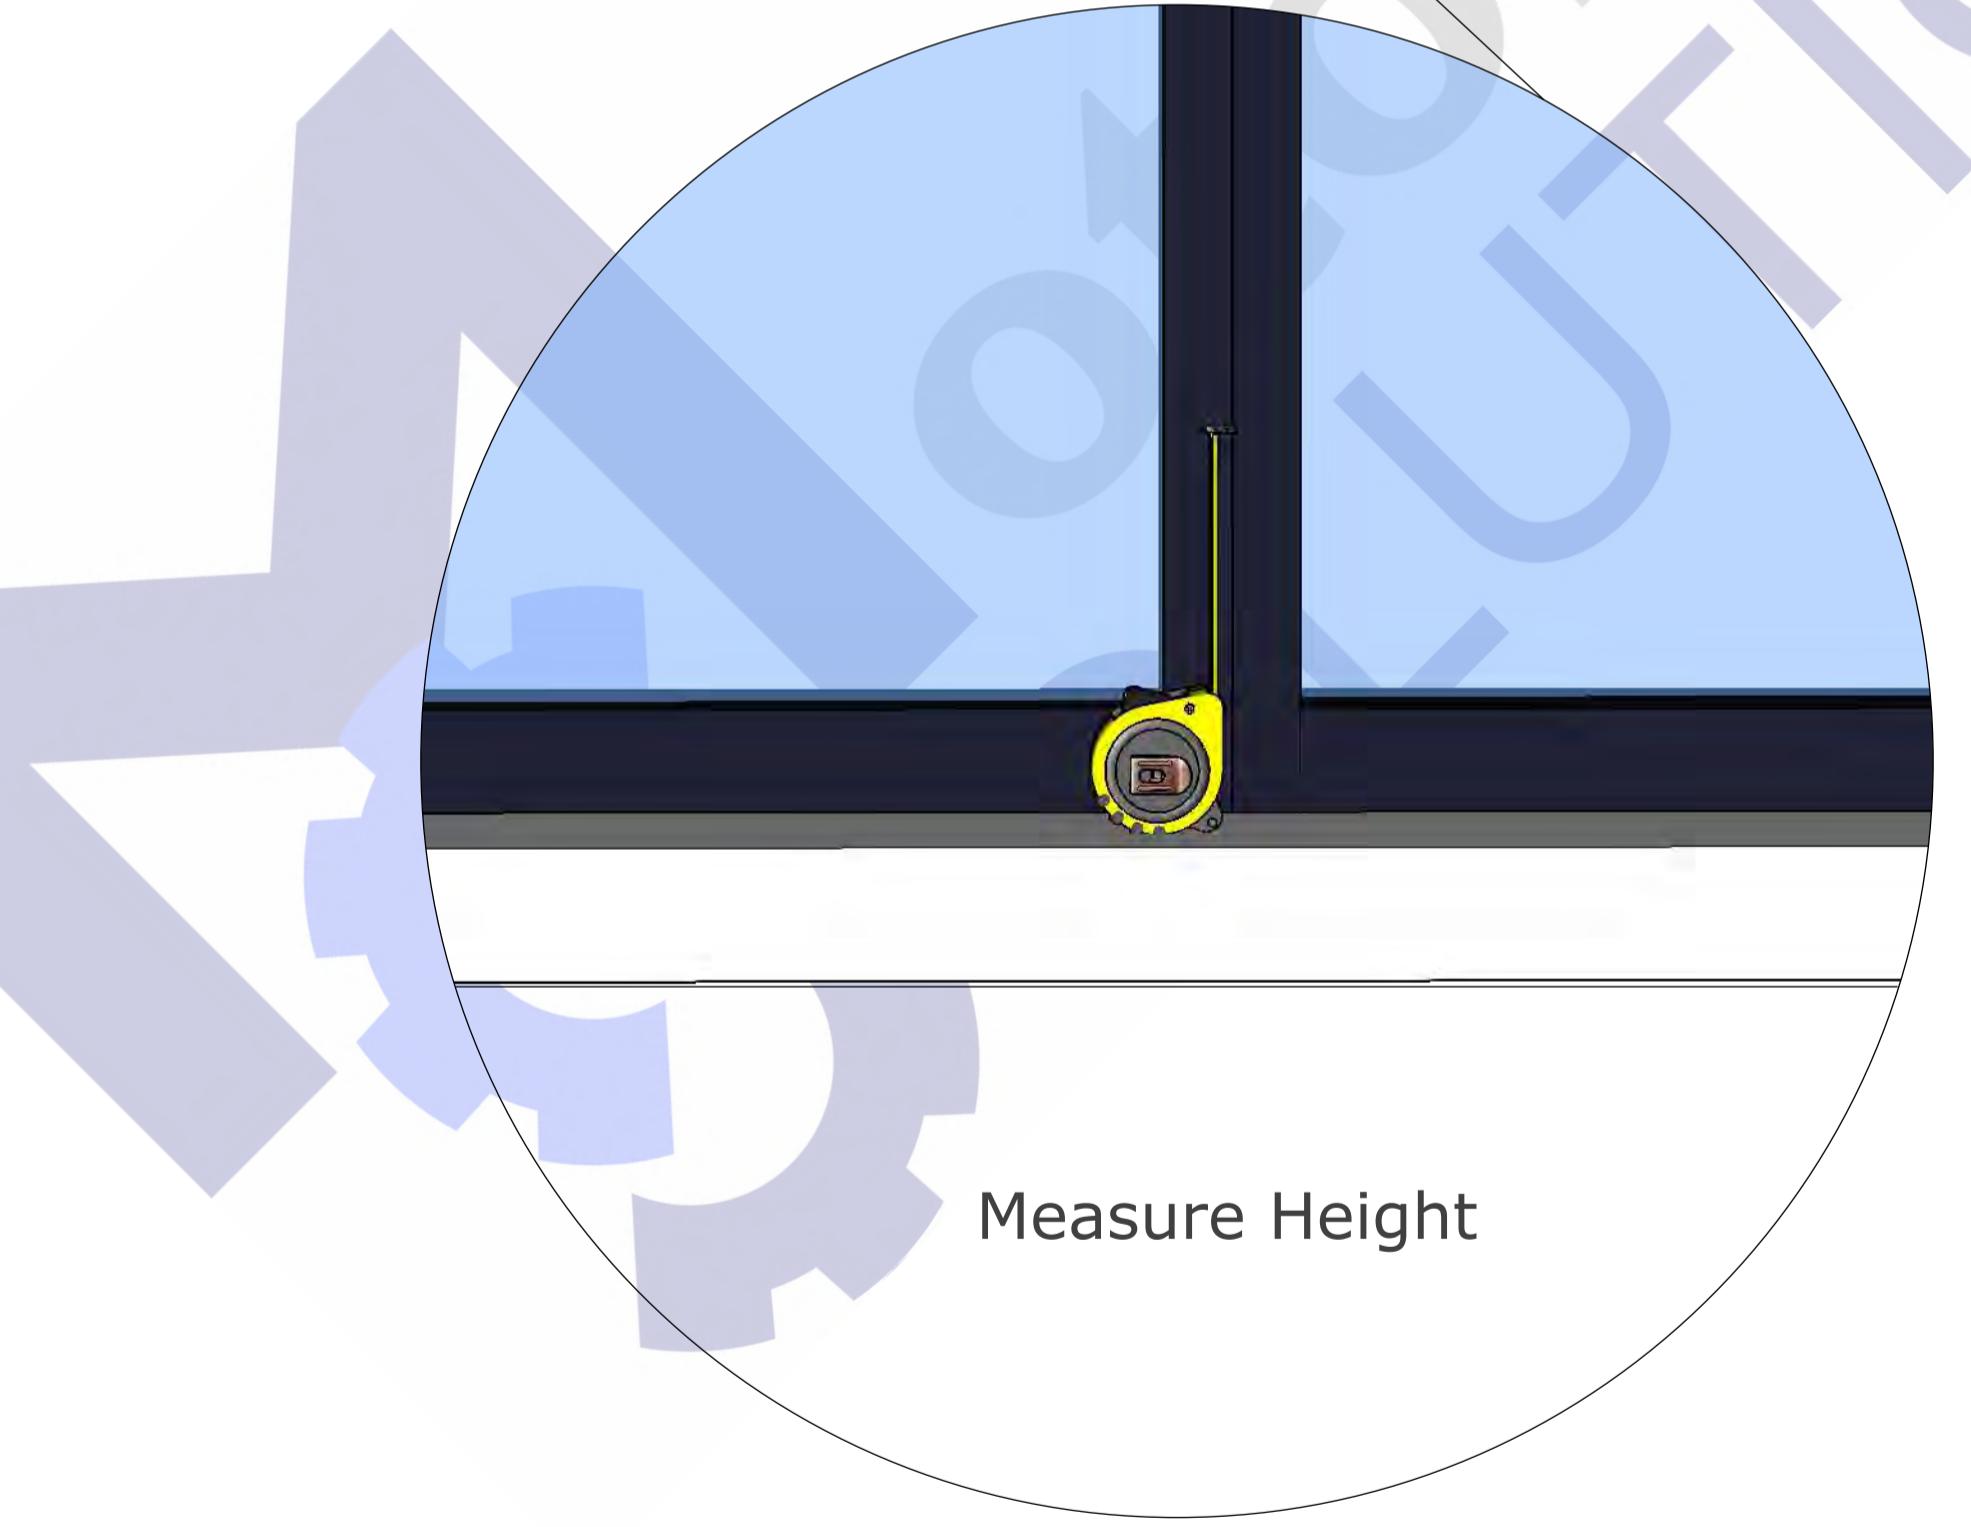

Measure Height

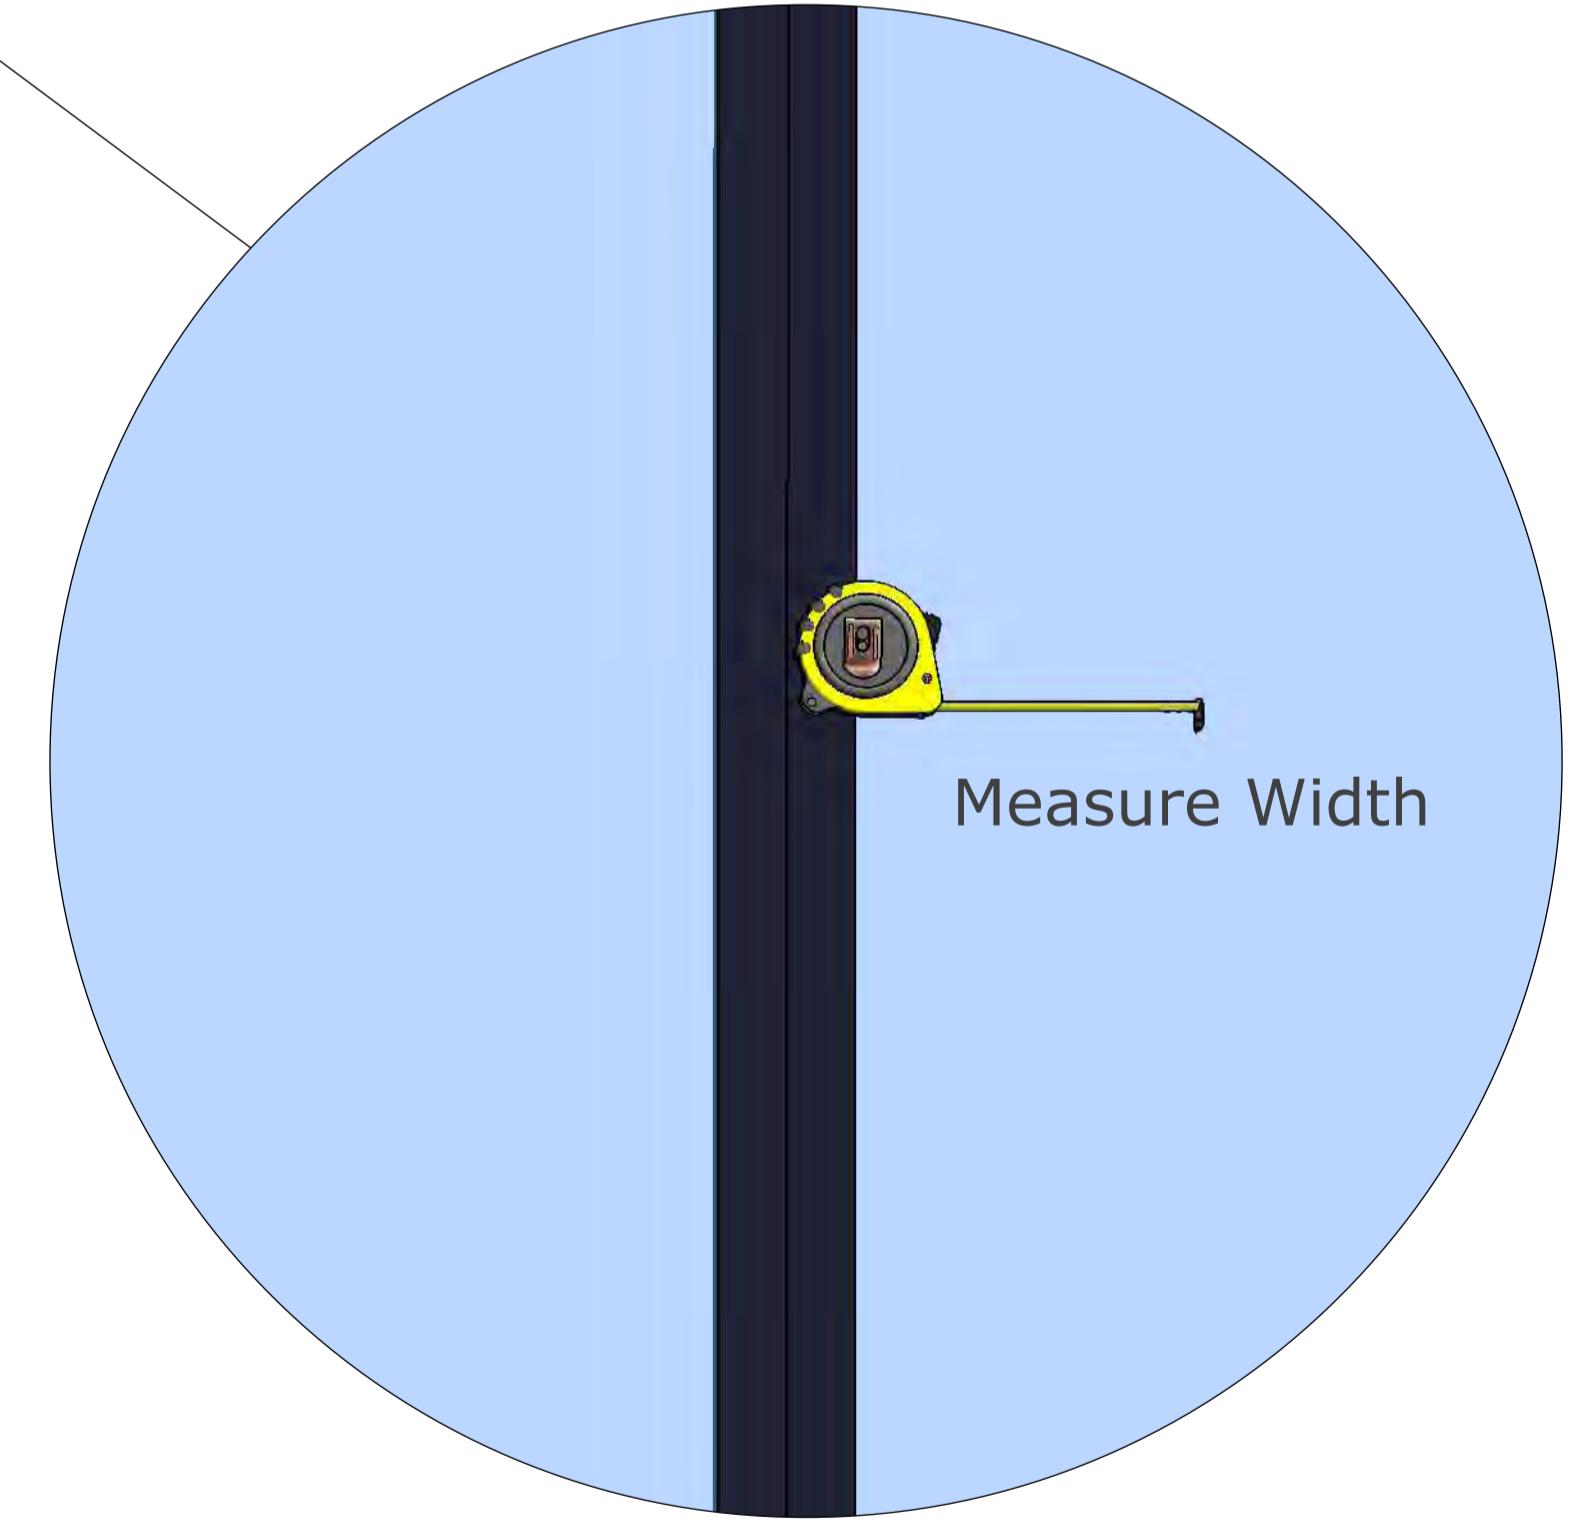

Measure Width