



DEL MOTORIZED SOLUTIONS

(866) 44MOTOR - (215) 639.3880

WWW.MOTORIZEDSOLUTIONS.COM

Programming & Operation Instructions


System II - IR Remote Control

Before You Begin

1. Install window shading complete with HDI motorization into window frame following manufacturers instructions.
2. Install desired battery pack or optional wand as directed.
3. The "memory" is stored in the motor allowing for 1 remote control to program multiple shades.

Step 1


Remove "pull tab" from back of remote control.

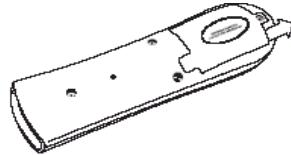

Step 2

Using a **small** paperclip depress the "MODE BUTTON" located on the back of the remote control.

The red indicator light on the front of the remote control should start flashing in a single-flash pattern.

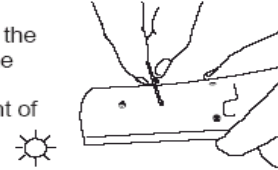


Step 3 - Check/Set Polarity

Aim the remote control at the motor and press the "DOWN" button once and the shade should "jog" down then up.*

- If it "jogs" up then down, hold down the "TOP" button and it will jog down then up.



* If the unit does not respond to check polarity and green LED blinks three (3) times, reset the limits (Step 8)

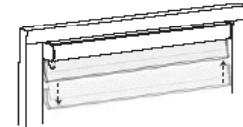

Step 4 - Set Upper Limit



Hold down the "CENTER" button till you see a double-flashing pattern on the indicator light.

1. Press and hold the "TOP" button until shade reaches desired upper limit.
2. Press and hold the "CENTER" button till you receive a "jog" confirming the upper limit.

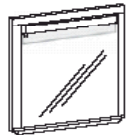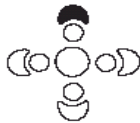

Step 5 - Set Lower Limit

1. Press and hold the "BOTTOM" button until shade reaches desired lower limit.
2. Press and hold the "CENTER" button till you receive a "jog" confirming the lower limit.

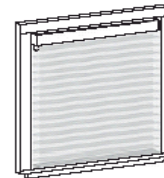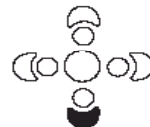

Step 6 - Set "Preferred" Position (optional)


(If you choose to do this step later, see Step 9)

1. Press and hold the "TOP" button until shade reaches desired "preferred" position.
2. Press and hold the "OUTER LEFT and/or RIGHT" button(s) till you receive a "jog" confirming the "preferred" position.



Step 7 - Exit Installation


Using a **small** paperclip depress the "MODE BUTTON" located on the back of the remote control. The red indicator light on the front of the remote control should stop flashing. Programming complete!

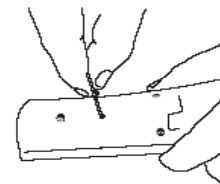

Step 8 - Resetting The Motor/Limits

If limits are not set correctly:

1. At the same time, depress the "MODE" button on the back of the remote control as well as the "CENTER" button on the front of the remote control and hold for 7+ seconds, aiming the remote at the motor.
2. The green indicator light on the motor should flash rapidly to confirm the clearing of limits.
3. Using the **small** paperclip depress the "MODE BUTTON" located on the back of the remote control. The red indicator light on the front of the remote control should stop flashing. Begin again at Step 2.

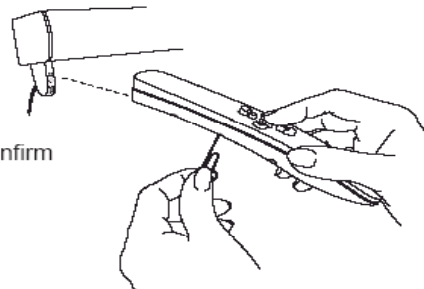

Showroom:

2075 Byberry Road
The Atrium, Suite 108
Bensalem, PA 19020

Factory:

111 Buck Road
Unit #900
Huntingdon Valley, PA 19006