



DEL MOTORIZED SOLUTIONS

(866) 44MOTOR - (215) 639.3880

WWW.MOTORIZEDSOLUTIONS.COM

Programming & Operation Instructions

RTS For System II Roll-Up (LT-30)



STEP 1 - Connect Receiver To Motor

- 1) Connect Receiver Cable (provided) into designated connector located on the RTS Receiver.
- 2) Connect opposite end of Receiver Cable into connector on respective motor.

STEP 2 - Clear Receiver Memory

- 1) Press and hold the **Program Button** on the RTS Receiver (approx. 10 seconds) until the LED light on the Receiver and the green LED on the motor begins to blink rapidly, then release the button. Wait for blinking to end.


NOTE: If the green LED on the motor does **not** blink, check connector between RTS Receiver and motor.

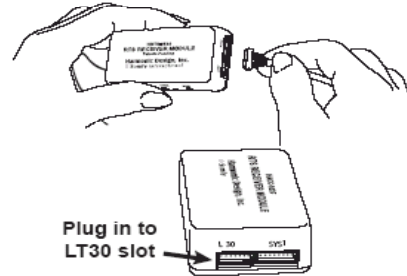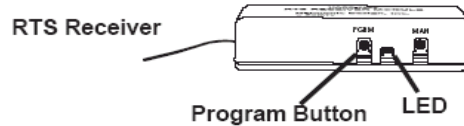

STEP 3 - Assign A Transmitter - (For use with Telis 1, Telis 4, Decora 1, Decora 4 or Chronis Timer)

- 1) Press and hold the **Program Button** on the RTS Receiver (approx. 4 seconds) until the LED light on the Receiver turns on, then release the button. The LED light on the Receiver will remain on.
- 2) Press and hold the **Programming Button** (picture to the right) on the Transmitter (Telis, Decora or Chronis) until the shade moves or "jogs", then release the button. The transmitter is now assigned to the RTS Receiver.

POLARITY NOTE: The "jog" movement of the shade **MUST** travel **DOWNWARD** then **UPWARD**. If **not**, press and hold the **Middle** button on the transmitter until the shade "jogs" **DOWNWARD** then **UPWARD**. **Polarity must be determined BEFORE** setting limits.

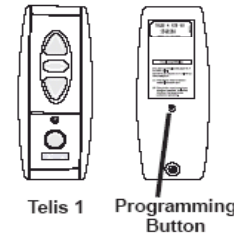

STEP 4 - Set Upper Limit ... (Must be done FIRST)



- 1) Press and hold the **UP** button on the transmitter until shade reaches desired upper limit.

NOTE: If directional buttons (UP & DOWN) respond in reverse, begin again at Step 2 (Reference "Polarity Note" in Step 3)

NOTE: The motor will stop rotating when shade reaches 4'. For longer shades, repress the **UP** button to continue travel to upper limit.
- 2) Press and hold the **MIDDLE** and **UP** buttons **Simultaneously** until the shade "jogs" confirming the set position.

STEP 5 - Set Lower Limit



- 1) Press and hold the **DOWN** button on the transmitter until shade reaches desired lower limit.

NOTE: The motor will stop rotating when shade reaches 4'. For longer shades, repress the **DOWN** button to continue travel to lower limit.
- 2) Press and hold the **MIDDLE** and **DOWN** buttons **Simultaneously** until the shade "jogs" confirming the set position.

NOTE: Shade will not be operational until Step 5 is complete. Proceed to Step 6 within 30 seconds otherwise all limit settings will require reprogramming (Start again from Step 2)

STEP 6 - Confirm Limits (Exit Install Mode)



- 1) Once the "Upper" and "Lower" limits are confirmed, simply press and hold the **MIDDLE** button on the transmitter (approx. 2-3 seconds) until shade "jogs" confirming both limit settings.

NOTE: Limit settings **cannot** be re-adjusted once confirmed. RTS Receiver must be "cleared" in order to re-program limit settings (Step 2)

OPTION 1 - Set Intermediate or "Preferred" Shade Position (IP)

- 1) Once the "Upper" and "Lower" limits are confirmed, simply activate the shade to reach the desired position.
- 2) Press and hold the **MIDDLE** button on the transmitter (approx. 4-5 seconds) until the shade "jogs" confirming the set position.

NOTE: When using a Chronis timer, confirm IP using a Telis transmitter by moving to IP and holding the **MIDDLE** button on the transmitter (approx. 4-5 seconds)

OPTION 2 - Add Additional Transmitters


- 1) Press and hold the **Programming Button** on the **Previously** programmed transmitter (for 2-3 seconds) until the programmed shade "jogs"
- 2) Press and hold the **Programming Button** on the **Additional** transmitter (for 1-2 seconds) until the the programmed shade "jogs", confirming transmitter has been added.

OPTION 3 - Assign Motors to Specific Channels/Addresses (for multi-channel transmitters only)

NOTE: To prevent unwanted channel assignments, unplug previously programmed RTS Receivers until all programming is completed.

- 1) Press and hold the **Programming Button** on the **Previously** programmed transmitter (for 2-3 seconds) until the programmed shade "jogs".
- 2) Select desired **channel** (1-4 or all) by **momentarily** pressing the **Channel Selector** button on the multi-channel transmitter.
- 3) Press and hold the **Programming Button** on the multi-channel transmitter (for 1-2 seconds) until the programmed shade "jogs".

NOTE: To delete a specific channel/address already programmed, follow steps for "Option 3". The "jog" in Step 3 will confirm deleted channel.



Showroom:

2075 Byberry Road
The Atrium, Suite 108
Bensalem, PA 19020

Factory:

111 Buck Road
Unit #900
Huntingdon Valley, PA 19006